Airwell

Service Manual

Dakota WDI DCI Series

Indoor Units	Outdoor Units
Dakota 7	GC 7
Dakota 9	GC 9
Dakota 12	GC 12
Dakota 18	GC 18



REFRIGERANT

R410A

HEAT PUMP

SEPTEMBER - 2008

LIST OF EFFECTIVE PAGES

Note: Changes in the pages are indicated by a "Revision#" in the footer of each effected page (when none indicates no changes in the relevant page). All pages in the following list represent effected/ non effected pages divided by chapters.

Dates of issue for original and changed pages are:

Original 0 15 March 2005

Total number of pages in this publication is 79 consisting of the following:

Page	Revision	Page	Revision	Page	Revision
No.	No. #	No.	No. #	No.	No. #

Title	2
A	2
i	2
1-1 - 1-3	2
2-1 - 2-4	2
3-1	2
4-1 - 4-3	2
5-1 - 5-20	2
6-1 - 6-4	2
7-1	2
8-1	2
9-1	2
10-1	2
11-1-11-14	2
12-1-12-7	2
13-1-13-11	2
Appendix -A	2

Zero in this column indicates an original page.

^{*}Due to constant improvements please note that the data on this service manual can be modified with out notice.

^{**}Photos are not contractual

Table of Contents

1.	INTRODUCTION	1-1
2.	PRODUCT DATA SHEET	2-1
3.	RATING CONDITIONS	3-1
4.	OUTLINE DIMENSIONS	4-1
5.	PERFORMANCE DATA & PRESSURE CURVES	5-1
6.	SOUND LEVEL CHARACTERISTICS	6-1
7.	ELECTRICAL DATA	7-1
8.	WIRING DIAGRAMS	8-1
9.	REFRIGERATION DIAGRAMS	9-1
10.	TUBING CONNECTIONS	10-1
11.	CONTROL SYSTEM	11-1
12.	TROUBLESHOOTING	12-1
13.	EXPLODED VIEWS AND SPARE PARTS LISTS	13-1
4.4	ADDENDIVA	444

1. INTRODUCTION

1.1 General

The new **Dakota DC Inverter** split wall mounted series comprise RC (heat pump) models, as follows:

- Dakota 7
- Dakota 9
- Dakota 12
- Dakota 18

The indoor **Dakota** units are available as LED display types only, featuring esthetic design, compact dimensions, and low noise operation.

1.2 Main Features

The **Dakota** series benefits from the most advanced innovations, namely:

- DC Inverter Technology
- R410A
- Microprocessor control.
- Infrared remote control with liquid crystal display.
- Indoor large diameter cross flow fan, allowing low noise level operation.
- Bended indoor coil with treated aluminum fins and coating for improved efficiency.
- High COP.
- Pre-Charged units up to the max allowing tubing distance.
- Heating operation at outdoor temperature down to -15°C
- Advanced test and diagnostics mode.
- M2L diagnostics softwear cable port (for PC)
- Easy access to the interconnecting tubing and wiring connections, so that during installation removing the front grill or casing is not necessary.
- Refrigerant pipes can be connected to the indoor unit from 5 different optional directions.
- Automatic treated air sweep.
- Easy installation and service.

Airwell

1.3 Indoor Unit

The indoor unit is wall mounted, and can be easily fitted to many types of residential and commercials applications.

It includes:

- Casing with air inlet and outlet grills.
- A large-diameter tangential fan.
- · Bended coil with treated aluminum fins.
- Motorized flaps.
- Variable Speed motor (PG).
- · Advanced electronic control box assembly.
- Interconnecting wiring terminal block.
- Mounting plate.

1.4 Filtration

The **Dakota** series presents several types of air filters:

- Easily accessible, and re-usable pre-filters (mesh)
- Pre-charged electrostatic filter (optional)
- Active carbon filter (optional)

1.5 Control

The microprocessor indoor controller, and an infrared remote control, supplied as standard, provide complete operating function and programming. For further details please refer to the Operation Manual, Appendix A.

1.6 Outdoor Unit

The **Dakota** outdoor units can be installed as floor or wall mounted units by using a wall supporting bracket. The metal sheets are protected by anti- corrosion paint work allowing long life resistance. All outdoor units are pre-charged. For further information please refer to the Product Data Sheet, Chapter 2.

It includes:

- Single DC Rotary Compressor mounted in a soundproofed compartment
- Axial fan.
- Outdoor coil with hydrophilic louver fins.
- Outlet air fan grill.
- Outdoor advanced controller.
- 2 fan speed AC motor

1.7 Tubing Connections

Flare type interconnecting tubing to be produced on site. For further details please refer to the Installation Manual, Appendix A.

1.8 Inbox Documentation

Each unit is supplied with its own installation and operation manuals.

1.9 Matching Table

			11	NDOOR UNI	тѕ	
OUTDOOR UNITS						
	MODEL	REFR"	Dakota 7	Dakota 9	Dakota 12	Dakota 18
	GC 7 GC 9 GC 12	R410A		V	√	
	GC 18	R410A	_	_		V

2. PRODUCT DATA SHEET

2.1 Dakota 7 / GC 7 DCI R410A

Model I	Indoor Unit			Dakota 7	DCI	
Model (Outdoor Unit			GC 7 R4	10A	
Installa	tion Method of Pipe			Flare	d	
Charac	cteristics		Units	Cooling	Heating	
Capaci	tv ⁽¹⁾		Btu/hr	7500(4440-8870)	8530(4440-10580)	
			kW	2.2(1.3-2.6)	2.5(1.3-3.1)	
Power	•		kW	0.66	0.73	
	Cooling) or COP(Heating) (1)		W/W	3.33	3.42	
	efficiency class) //DI //II	A	В	
Powers			V/Ph/Hz	220-240V/Sin	Ī	
Rated			A	3.0	3.3	
	g current breaker rating		A	10.5		
Circuit	Fan type & quantity		A	Crossflov	1	
	Fan speeds	H/M/L	RPM	1100/950		
	Air flow (2)		m3/hr	400/350/		
	Air flow (2) H/M/L External static pressure Min-Max		Pa	400/330/	-000	
	Sound power level (3)	H/M/L	dB(A)	49/46/-	43	
	Sound pressure level (4)	H/M/L	dB(A)	36/33/		
OR	Moisture removal	11/10// -	I/hr	1	50	
NDOOR	Condensate drain tube I.D		mm	16		
Z	Dimensions	WxHxD	mm	680x250	x185	
	Weight		kg	7		
	Package dimensions WxHxD		mm	740x265x320		
	Packaged weight		kg	10		
	Units per pallet		units	36 units per pallet		
	Stacking height		units	9 levels		
	Refrigerant control			EEV		
	Compressor type, model			Rotary, Panasonic 5RS092XDJ01		
	Fan type & quantity			Propeller(direct) x 1		
	Fan speeds	H/L	RPM	770		
	Air flow	H/L	m3/hr	1400)	
	Sound power level	H/L	dB(A)	64		
	Sound pressure level (4)	H/L	dB(A)	54		
	Dimensions	WxHxD	mm	760x245	x545	
ᄶ	Weight		kg	35		
OOOR	Package dimensions	WxHxD	mm	880x310	x610	
оптр	Packaged weight		kg	38		
ō	Units per pallet		Units	12 units pe		
	Stacking height		units	3 leve		
	Refrigerant type			R410		
	Refrigerant chargless distance		kg/m	0.7kg/7		
	Additional charge per 1 me		g/m	No nee		
		Liquid line	In.(mm)	1/4"(6.3	•	
	Connections between	Suction line	In.(mm)	3/8"(9.5	•	
	units Max.tubing length		m. m.	Max.15		
•	Max.height difference			Max. 1		
	ion control type		1327	Remote c	ontrol	
	g elements		kW			
Others						

- (1) Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units) and EN 14511.
- (2) Airflow in ducted units; at nominal external static pressure.
- (3) Sound power in ducted units is measured at air discharge.
- (4) Sound pressure level measured at 1 meter distance from unit.

2.2 Dakota 9 / GC 9 DCI R410A

Model I	Indoor Unit			Dako	ota 9	
Model (Outdoor Unit			GC 9		
Installa	tion Method of Pipe			Fla	red	
Charac	cteristics		Units	Cooling	Heating	
Canaci	+, (1)		Btu/hr	8530(4440-10240)	9550(4774-11940)	
•	Capacity ⁽¹⁾		kW	2.5(1.3-3.0)	2.8(1.4-3.5)	
	input ⁽¹⁾		kW	0.75	0.82	
	Cooling) or COP(Heating) (1)		W/W	3.33	3.41	
	efficiency class			Α	В	
Power			V/Ph/Hz	220-240V/S		
Rated			A	3.2	3.6	
`	g current		A	1		
Circuit	breaker rating		Α	1.	=	
	Fan type & quantity	11/24/	5514	Crossfl		
	Fan speeds	H/M/L	RPM	1200/10		
	Air flow (2)	H/M/L	m3/hr	420/35		
	External static pressure	Min-Max	Pa	50/4		
	Sound power level (3)	H/M/L	dB(A)	52/4		
K.	Sound pressure level ⁽⁴⁾	H/M/L	dB(A)	39/3		
NDOOR	Moisture removal		l/hr	1 1	•	
볼	Condensate drain tube I.D	\\\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.	mm			
	Dimensions	WxHxD	mm	680x25		
	Weight Package dimensions	WxHxD	kg	7 740x265x320		
	Package dimensions Packaged weight	VVXIIXD	mm	10		
	Units per pallet		kg units	<u> </u>	*	
	Stacking height		units	36 units per pallet 9 levels		
	Refrigerant control		units			
	Compressor type, model			Rotary, Panasonic 5RS092XDJ01		
	Fan type & quantity			Propeller(direct) x 1		
	Fan speeds	H/L	RPM	76	· · · · · · · · · · · · · · · · · · ·	
	Air flow	H/L	m3/hr	13		
	Sound power level	H/L	dB(A)	6		
	Sound pressure level ⁽⁴⁾	H/L	dB(A)	5		
	Dimensions	WxHxD	mm	760x24	!5x545	
œ	Weight	l	kg	3		
<u> </u>	Package dimensions	WxHxD	mm	880x31	0x610	
OUTDOOR	Packaged weight	1	kg	3	9	
\subseteq	Units per pallet		Units	12 units p	per pallet	
Ŭ	Stacking height		units	3 le	vels	
	Refrigerant type			R41		
	Refrigerant chargless distar	ice	kg/m	0.85kg/7.5m		
	Additional charge per 1 met	er	g/m	No r	need	
		Liquid line	In.(mm)	1/4"(6	6.35)	
	Connections between	Suction line	In.(mm)	3/8"(9.53)	
	units	Max.tubing length	m.	Мах	c.15	
Max		Max.height difference	m.	Max	. 10	
Operati	ion control type	LUMETERICE		Remote	control	
	g elements		kW			
Others	=					

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units) and EN 14511.

⁽²⁾ Airflow in ducted units; at nominal external static pressure.(3) Sound power in ducted units is measured at air discharge.

⁽⁴⁾ Sound pressure level measured at 1 meter distance from unit.

2.3 Dakota 12 / GC 12 DCI R410A

Model	Indoor Unit			Dakota 12		
Model	Outdoor Unit			GC		
Installa	tion Method of Pipe			Flar	ed	
Charac	cteristics		Units	Cooling	Heating	
Capaci	· (1)		Btu/hr	11940(4440-13990)	12280(5115-13990	
Сарасі	ty (*)		kW	3.5(1.3-4.1) 3.6(1.65-4.1		
	input (1)		kW	1.03 1.05		
	Cooling) or COP(Heating) (1)		W/W	3.39	3.43	
	efficiency class			A	В	
	supply		V/Ph/Hz	220-240V/S	ingle/50Hz	
	current		A	4.9	4.8	
	g current		A	10		
Circuit	breaker rating		A	15		
	Fan type & quantity			Crossfl		
	Fan speeds	H/M/L	RPM	1200/10		
	Air flow (2)	H/M/L	m3/hr	550/45		
	External static pressure	Min-Max	Pa	0		
	Sound power level (3)	H/M/L	dB(A)	56/46		
ᄍ	Sound pressure level ⁽⁴⁾	H/M/L	dB(A)	39/33		
NDOOR	Moisture removal		l/hr	1.3		
Z	Condensate drain tube I.D		mm	16	-	
_	Dimensions	WxHxD	mm	840x25		
	Weight		kg	8		
	Package dimensions	WxHxD	mm	930x265x320		
	Packaged weight		kg 	11 36 units per pallet		
	Units per pallet		units			
	Stacking height		units	9 lev		
	Refrigerant control			EE D. L D		
	Compressor type, model			Rotary, Panasonic 5RS102XAB		
	Fan type & quantity	11/1	DDM	Propeller(direct) x 1 760		
	Fan speeds Air flow	H/L H/L	RPM m3/hr	139		
		H/L				
	Sound power level	H/L	dB(A)	65		
	Sound pressure level ⁽⁴⁾ Dimensions	WxHxD	dB(A)	55 760x245x545		
~		WXUXD	mm			
OUTDOOR	Weight Package dimensions	WxHxD	kg mm	37 880x310x610		
DC	Packaged weight	VVALIAD	kg	880x310x610 40		
Ď	Units per pallet		Units	12 units p		
O	Stacking height		units	3 lev		
	Refrigerant type		Gillo	R41		
	Refrigerant chargless distance		kg/m	1.0kg/		
	Additional charge per 1 meter		g/m	No n		
	ondige per 1 motor	Liquid line	In.(mm)	1/4"(6		
		Suction line	In.(mm)	3/8"(9.53)		
	Connections between units	Max.tubing length	m.	Max		
Max.height		m.	Max. 10			
Operation control type				Remote control		
			kW	Remote		
Others	g elements		NVV	IN	J	

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units) and EN 14511.

⁽²⁾ Airflow in ducted units; at nominal external static pressure.

⁽³⁾ Sound power in ducted units is measured at air discharge.

⁽⁴⁾ Sound pressure level measured at 1 meter distance from unit.



2.4 Dakota 18 / GC 18 DCI R410A

Mode	el Indoor Unit			DELTA 50 DC	ÇI .	
Mode	el Outdoor Unit			DCR 50 R410	Α	
Insta	llation Method of Pipe			Flared		
Char	acteristics		Units	Cooling	Heating	
Capacity (1)		Btu/hr	17060(4780-18770)	18080(5460-20130)		
· ·	-			5.0(1.4-5.5)	5.3(1.6-5.9)	
	er input ⁽¹⁾		kW	1.56 1.55		
	(Cooling) or COP(Heating) (1)		W/W	3.21	3.42	
	gy efficiency class			Α	В	
	er supply		V/Ph/Hz	220-240V/Single/	I	
	d current		A	7.0	6.9	
	ing current		A	10.5		
Circu	it breaker rating		A	20		
	Fan type & quantity			Crossflow x 1		
	Fan speeds	H/M/L	RPM	1230/1100/90		
	Air flow (2) H/M/L		m3/hr	720/620/480		
	External static pressure	Min-Max	Pa	0		
	Sound power level (3)	H/M/L	dB(A)	56/54/47		
ᄶ	Sound pressure level (4)	H/M/L	dB(A)	44/41/34		
NDOOR	Moisture removal		l/hr	2		
물	Condensate drain tube I.D		mm	16		
	Dimensions	WxHxD	mm	900x205x295		
	Weight	1	kg	11		
	Package dimensions	WxHxD	mm	960x270x360		
	Packaged weight		kg	14		
	Units per pallet		units	24 units per pallet		
	Stacking height		units	8 levels		
	Refrigerant control			Scroll, PANASONIC 5CS130XCC03		
	Compressor type, model			<u> </u>		
	Fan type & quantity Fan speeds	H/L	RPM	Propeller(direct) 920	X I	
	Air flow	H/L	m3/hr	2160		
	Sound power level	H/L	dB(A)	63		
}	Sound pressure level (4)	H/L	dB(A)	53		
	Dimensions	WxHxD	mm	795x290x610	1	
~	Weight	WALIAD	kg	38	,	
Ö	Package dimensions	WxHxD	mm	945x395x655		
OUTDOOR	Packaged weight	WALIAD	kg	41	,	
5	Units per pallet		Units	9 units per pall	et	
	Stacking height		units	3 levels		
	Refrigerant type		41110	R410A		
	Refrigerant chargless distant	ce	kg/m	1.26kg/7.5m		
	Additional charge per 1 meter		g/m	No need		
		Liquid line	In.(mm)	1/4"(6.35)		
	Connections between	Suction line	In.(mm)	1/2"(12.7)		
	units	Max.tubing length	m.	Max.15		
	Max.height difference		m.	Max. 10		
Oper	ation control type			Remote control	ol	
	ing elements		kW			
Othe	-					
			·			

⁽¹⁾ Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units) and EN 14511.

⁽²⁾ Airflow in ducted units; at nominal external static pressure.

⁽³⁾ Sound power in ducted units is measured at air discharge.

⁽⁴⁾ Sound pressure level measured at 1 meter distance from unit.

3. RATING CONDITIONS

Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

Cooling:

Indoor: 27°C DB 19°C WB

Outdoor: 35 °C DB

Heating:

Indoor: 20°C DB

Outdoor: 7°C DB 6°C WB


3.1 Operating Limits

3.1.1 R410A


		Indoor	Outdoor	
Cooling	Upper limit	32°C DB 23°C WB	46°C DB	
Cooling	Lower limit	21°C DB 15°C WB	10°C DB	
Heating	Upper limit	27°C DB	24°C DB 18°C WB	
Пеанну	Lower limit	10°C DB	-15°C DB -16°C WB	
Vo	oltage	198 – 264 V		

4. OUTLINE DIMENSIONS


4.1 Indoor Unit: Dakota 7, 9 DCI

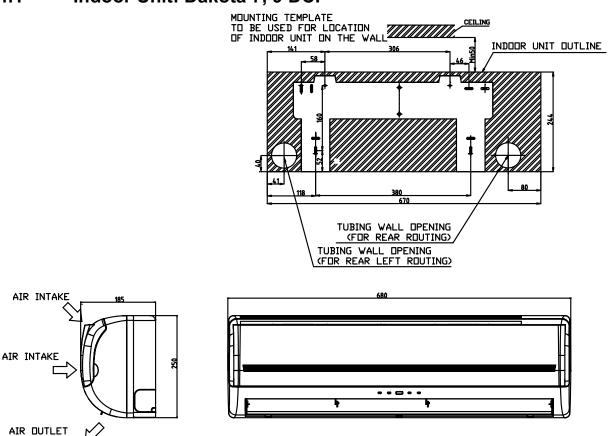


4.2 Indoor Unit: Dakota 12 DCI

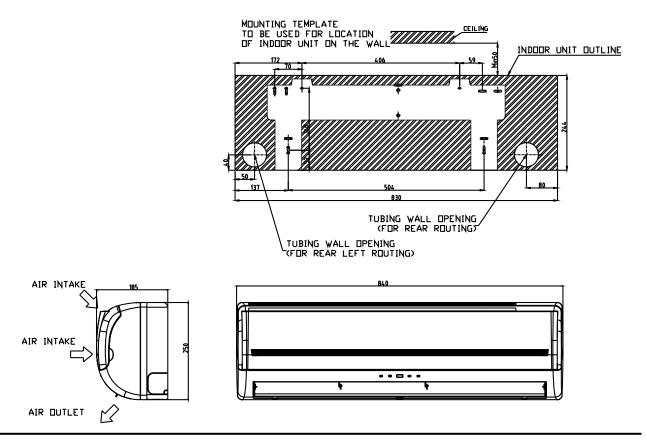

4.3 Indoor Unit: Dakota 18 DCI

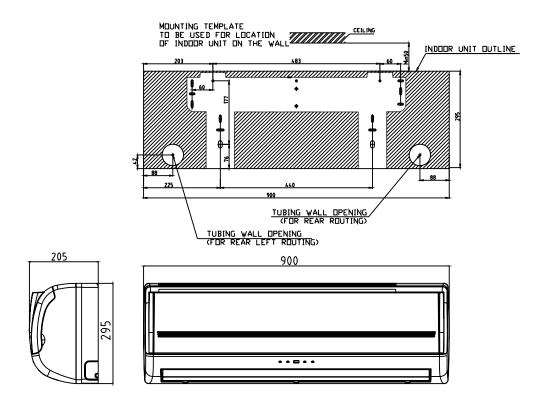



4.4 Outdoor Unit: GC 7, 9, 12 DCI

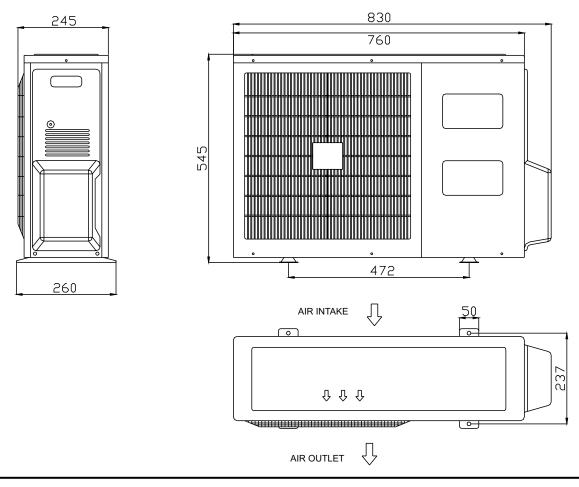


4-2 SM WDIDCI 1-A.2 GB

4.5 Outdoor Unit: GC 18 DCI

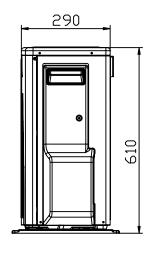

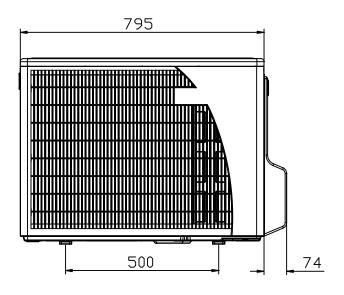

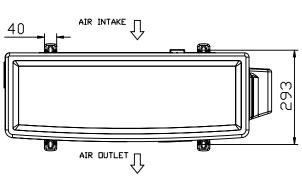

5. PERFORMANCE DATA

5.1 Dakota 7 DCI

5.1.1 Cooling Capacity (kW) – Run Mode

230[V]: Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]			URE [°C]	
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23
-10 - 20	TC		80 -	110 % of nor	minal	
(protection range)	SC		80 -	105 % of nor	minal	
(protection range)	PI	25 - 50 % of nominal				
	TC	2.12	2.26	2.40	2.54	2.68
25	SC	1.62	1.65	1.69	1.72	1.75
	PI	0.52	0.53	0.54	0.55	0.56
	TC	2.02	2.16	2.30	2.44	2.58
30	SC	1.58	1.61	1.65	1.68	1.71
	PI	0.58	0.59	0.60	0.61	0.62
	TC	1.92	2.06	2.20	2.34	2.48
35	SC	1.54	1.58	1.61	1.64	1.68
	PI	0.64	0.65	0.66	0.67	0.68
	TC	1.82	1.96	2.10	2.24	2.38
40	SC	1.50	1.54	1.57	1.60	1.64
	PI	0.70	0.71	0.72	0.73	0.74
	TC	1.70	1.84	1.98	2.12	2.26
46	SC	1.46	1.49	1.52	1.56	1.59
	PI	0.77	0.78	0.79	0.80	0.81

LEGEND

TC - Total Cooling Capacity, kW


SC - Sensible Capacity, kW

PI – Power Input, kW WB – Wet Bulb Temp., (°C)

DB – Dry Bulb Temp., (°C)

ID – Indoor OD – Outdoor

5.1.2 Capacity Correction Factors

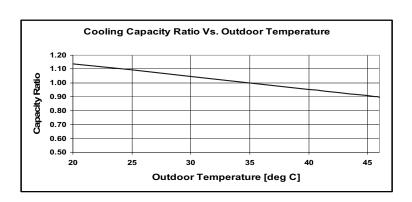

5.1.3 Heating Capacity (kW) - Run Mode 230[V]: Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB TEMPERATURE [°C]				
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25		
-15/-16	TC	1.59	1.48	1.37		
-15/-10	PI	0.44	0.48	0.53		
-10/-12	TC	1.77	1.66	1.55		
-10/-12	PI	0.53	0.57	0.62		
-7/-8	TC	1.91	1.80	1.68		
-17-0	PI	0.60	0.64	0.68		
-1/-2	TC	1.97	1.86	1.75		
- 1/-2	PI	0.63	0.67	0.72		
2/1	TC	2.02	1.91	1.80		
2/1	PI	0.65	0.70	0.74		
7/6	TC	2.61	2.50	2.39		
7/6	PI	0.69	0.73	0.77		
10/0	TC	2.75	2.64	2.53		
10/9	PI	0.73	0.77	0.82		
15/12	TC	2.90	2.79	2.68		
10/12	PI	0.77	0.81	0.86		
15-24	TC	85 - 105 % of nominal				
(Protection Range)	PI	8	80 - 120 % of nominal			


LEGEND

TC - Total Heating Capacity, kW

PI – Power Input, kW
WB – Wet Bulb Temp., (°C)
DB – Dry Bulb Temp., (°C)

ID – Indoor OU – Outdoor

5.1.4 Capacity Correction Factors

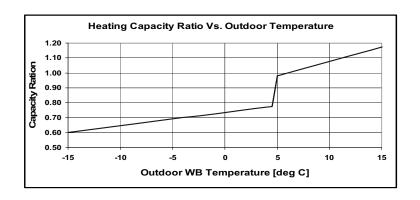

5-2 SM WDIDCI 1-A.2 GB

5.2 Dakota 9 DCI

5.2.1 Cooling Capacity (kW) – Run Mode

230[V]: Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]				
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23
-10 - 20	TC		- 08	110 % of nor	minal	
(protection range)	SC		- 08	105 % of noi	minal	
(protection range)	PI		25 -	50 % of non	ninal	
	TC	2.41	2.57	2.73	2.89	3.05
25	SC	1.67	1.71	1.74	1.77	1.81
	PI	0.59	0.60	0.61	0.62	0.63
	TC	2.30	2.46	2.62	2.77	2.93
30	SC	1.63	1.67	1.70	1.73	1.77
	PI	0.66	0.67	0.68	0.69	0.70
	TC	2.18	2.34	2.50	2.66	2.82
35	SC	1.59	1.63	1.66	1.69	1.73
	PI	0.73	0.74	0.75	0.76	0.77
	TC	2.07	2.23	2.39	2.54	2.70
40	SC	1.55	1.59	1.62	1.65	1.69
	PI	0.80	0.81	0.82	0.83	0.84
	TC	1.93	2.09	2.25	2.41	2.56
46	SC	1.50	1.54	1.57	1.61	1.64
	PI	0.88	0.89	0.90	0.91	0.92

LEGEND

TC - Total Cooling Capacity, kW

SC - Sensible Capacity, kW

PI – Power Input, kW


WB - Wet Bulb Temp., (°C)

DB - Dry Bulb Temp., (°C)

ID – Indoor

OD - Outdoor

5.2.2 Capacity Correction Factors

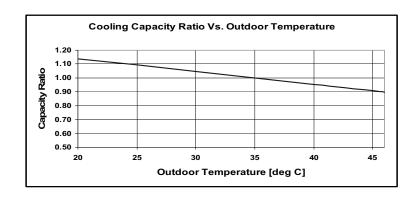

5.2.3 Heating Capacity (kW) - Run Mode 230[V]: Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB TEMPERATURE [°C]			
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25	
-15/-16	TC	1.78	1.66	1.53	
-13/-10	PI	0.49	0.54	0.59	
-10/-12	TC	1.98	1.86	1.73	
-10/-12	PI	0.59	0.64	0.69	
-7/-8	TC	2.14	2.01	1.89	
-77-0	PI	0.67	0.72	0.77	
-1/-2	TC	2.21	2.09	1.96	
-1/-2	PI	0.71	0.76	0.81	
2/1	TC	2.26	2.14	2.01	
2/1	PI	0.73	0.78	0.83	
7/0	TC	2.92	2.80	2.68	
7/6	PI	0.77	0.82	0.87	
10/9	TC	3.09	2.96	2.84	
10/9	PI	0.82	0.87	0.92	
45/40	TC	3.25	3.12	3.00	
15/12	PI	0.86	0.91	0.96	
15-24	TC	85 - 105 % of nominal			
(Protection Range)	PI	80 - 120 % of nominal			


LEGEND

TC - Total Heating Capacity, kW

PI – Power Input, kW
WB – Wet Bulb Temp., (°C)
DB – Dry Bulb Temp., (°C)

ID – Indoor OU – Outdoor

5.2.4 Capacity Correction Factors

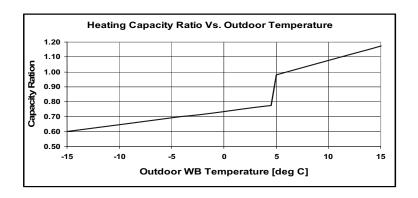

5-4 SM WDIDCI 1-A.2 GB

5.3 Dakota 12 DCI

5.3.1 Cooling Capacity (kW) - Run Mode

230[V]: Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]				
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23
-10 - 20	TC		80 -	110 % of noi	minal	
(protection range)	SC		80 -	105 % of no	minal	
(protection range)	PI	25 - 50 % of nominal				
25	TC	3.38	3.60	3.82	4.04	4.26
25	SC	2.54	2.59	2.64	2.69	2.74
	PI	0.81	0.83	0.84	0.86	0.87
	TC	3.22	3.44	3.66	3.88	4.10
30	SC	2.48	2.53	2.58	2.63	2.68
	PI	0.90	0.92	0.94	0.95	0.97
	TC	3.06	3.28	3.50	3.72	3.94
35	SC	2.42	2.47	2.52	2.57	2.62
	PI	1.00	1.01	1.03	1.05	1.06
40	TC	2.90	3.12	3.34	3.56	3.78
40	SC	2.36	2.41	2.46	2.51	2.56
	PI	1.09	1.11	1.12	1.14	1.16
46	TC	2.70	2.92	3.15	3.37	3.59
40	SC	2.28	2.34	2.39	2.44	2.49
	PI	1.21	1.22	1.24	1.25	1.27

LEGEND

TC - Total Cooling Capacity, kW

SC - Sensible Capacity, kW


PI - Power Input, kW

WB – Wet Bulb Temp., (°C)

DB - Dry Bulb Temp., (°C)

ID – Indoor OD – Outdoor

5.3.2 Capacity Correction Factors

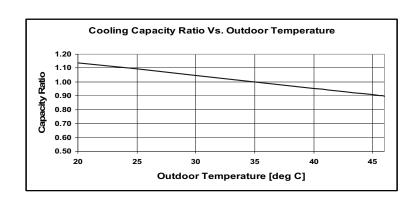

5.3.3 Heating Capacity (kW) - Run Mode 230[V]: Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB TEMPERATURE [°C]		
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25
-15/-16	TC	2.29	2.13	1.97
-13/-10	PI	0.63	0.69	0.76
-10/-12	TC	2.55	2.39	2.23
-10/-12	PI	0.76	0.82	0.89
-7/-8	TC	2.75	2.58	2.42
-11-0	PI	0.86	0.92	0.98
-1/-2	TC	2.84	2.68	2.52
- 1/-2	PI	0.91	0.97	1.03
2/1	TC	2.91	2.75	2.59
2/1	PI	0.94	1.00	1.07
7/0	TC	3.76	3.60	3.44
7/6	PI	0.99	1.05	1.11
40/0	TC	3.97	3.81	3.65
10/9	PI	1.04	1.11	1.17
45/40	TC	4.17	4.01	3.85
15/12	PI	1.10	1.17	1.23
15-24	TC	85 - 105 % of nominal		
(Protection Range)	PI	80 - 120 % of nominal		


LEGEND

TC - Total Heating Capacity, kW

PI – Power Input, kW
WB – Wet Bulb Temp., (°C)
DB – Dry Bulb Temp., (°C)

ID – Indoor OU – Outdoor

5.3.4 Capacity Correction Factors

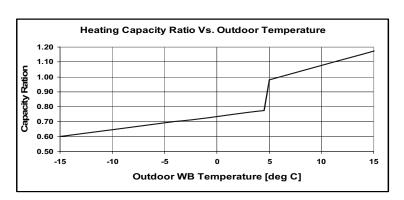

5-6 SM WDIDCI 1-A.2 GB

5.4 Dakota 18 DCI

5.4.1 Cooling Capacity (kW) – Run Mode

230[V]: Indoor Fan at High Speed.

		ID COIL I	ENTERING A	AIR DB/WB	TEMPERAT	URE [°C]
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23
-10 - 20	TC		- 08	110 % of nor	minal	
(protection range)	SC			105 % of noi		
(p. 555551511 121195)	PI			50 % of non		
	TC	4.93	5.22	5.51	5.80	6.09
25	SC	3.68	3.73	3.79	3.84	3.90
	PI	1.18	1.21	1.23	1.26	1.29
	TC	4.67	4.96	5.25	5.54	5.83
30	SC	3.53	3.59	3.64	3.70	3.75
	PI	1.34	1.37	1.40	1.42	1.45
	TC	4.42	4.71	5.00	5.29	5.58
35	SC	3.39	3.45	3.50	3.55	3.61
	PI	1.51	1.53	1.56	1.59	1.61
	TC	4.17	4.46	4.75	5.04	5.33
40	SC	3.25	3.30	3.36	3.41	3.47
	PI	1.67	1.70	1.72	1.75	1.78
	TC	3.86	4.15	4.44	4.73	5.02
46	SC	3.08	3.13	3.18	3.24	3.29
	PI	1.87	1.89	1.92	1.95	1.97

LEGEND

TC - Total Cooling Capacity, kW

SC - Sensible Capacity, kW


PI - Power Input, kW

WB - Wet Bulb Temp., (°C)

DB - Dry Bulb Temp., (°C)

ID – Indoor OD – Outdoor

5.4.2 Capacity Correction Factors

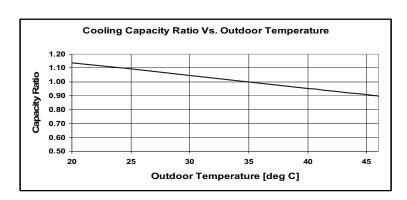

5.4.3 Heating Capacity (kW) - Run Mode 230[V]: Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB TEMPERATURE [°C]			
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25	
-15/-16	TC	3.37	3.14	2.90	
-13/-10	PI	0.93	1.02	1.12	
-10/-12	TC	3.76	3.52	3.28	
-10/-12	PI	1.12	1.22	1.31	
-7/-8	TC	4.04	3.81	3.57	
-17-0	PI	1.26	1.36	1.45	
-1/-2	TC	4.18	3.95	3.71	
-1/-2	PI	1.34	1.43	1.53	
0.14	TC	4.28	4.04	3.81	
2/1	PI	1.38	1.48	1.57	
7/6	TC	5.54	5.30	5.06	
7/6	PI	1.46	1.55	1.64	
10/0	TC	5.84	5.60	5.37	
10/9	PI	1.54	1.64	1.73	
45/40	TC	6.14	5.91	5.67	
15/12	PI	1.63	1.72	1.82	
15-24	TC	85 - 105 % of nominal			
(Protection Range)	PI	80 - 120 % of nominal			


LEGEND

TC - Total Heating Capacity, kW

PI – Power Input, kW
WB – Wet Bulb Temp., (°C)
DB – Dry Bulb Temp., (°C)

ID – Indoor OU – Outdoor


5.4.4 Capacity Correction Factors

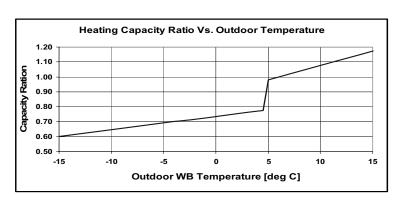


5-8 SM WDIDCI 1-A.2 GB

5.5 Capacity Correction Factor Due to Tubing Length


5.5.1 Dakota 7 DCI : Cooling

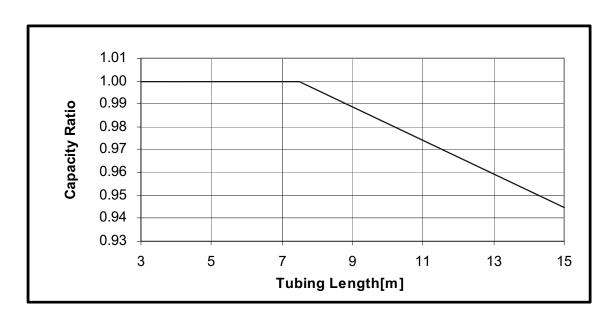


5.5.2 Heating

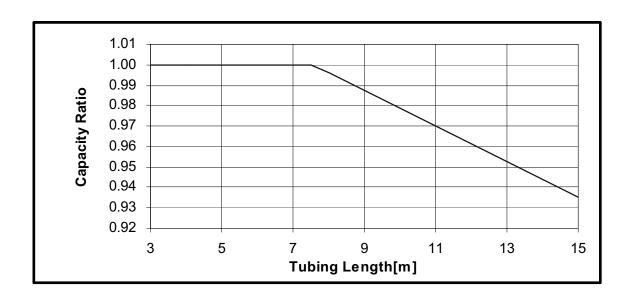

5.5.3 Dakota 9 DCI : Cooling

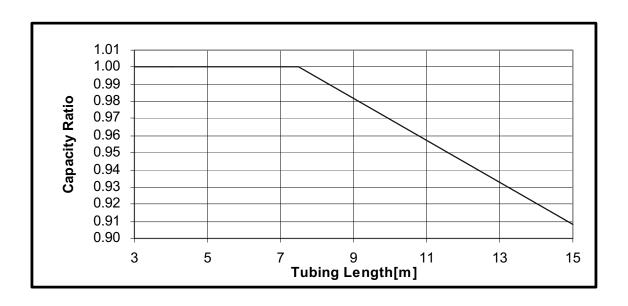


5.5.4 Heating

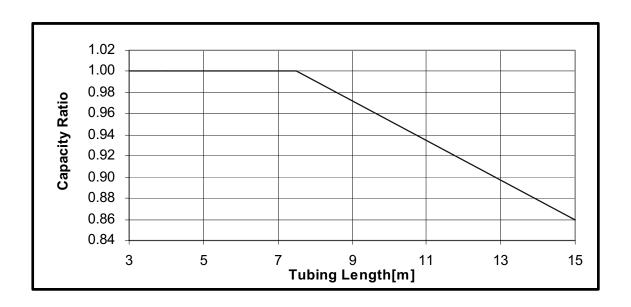


5-10 SM WDIDCI 1-A.2 GB


5.5.5 Dakota 12 DCI : Cooling

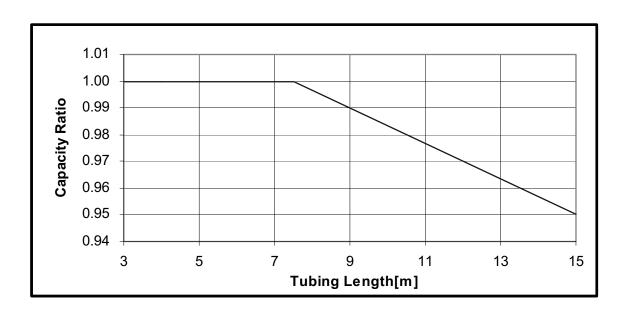


5.5.6 Heating

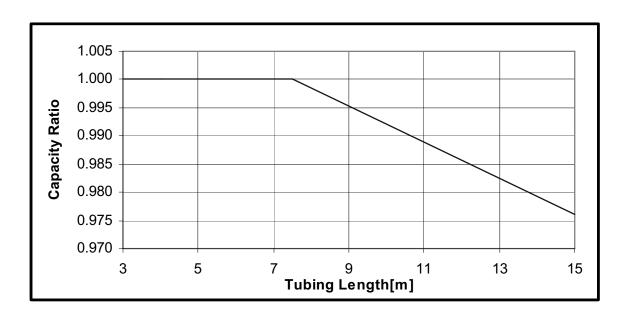

5.5.7 Dakota 18 DCI : Cooling

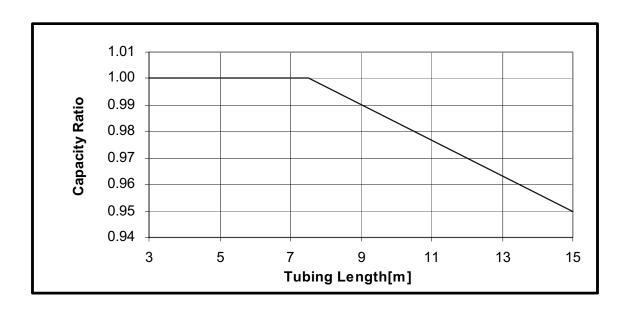


5.5.8 Heating

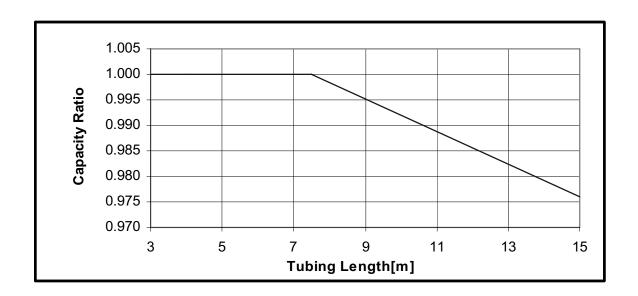


5-12 SM WDIDCI 1-A.2 GB


5.6 Pressure Curves


5.6.1 Model: Dakota 7 DCI Cooling – Test Mode

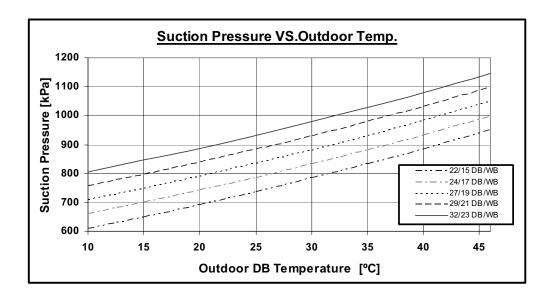

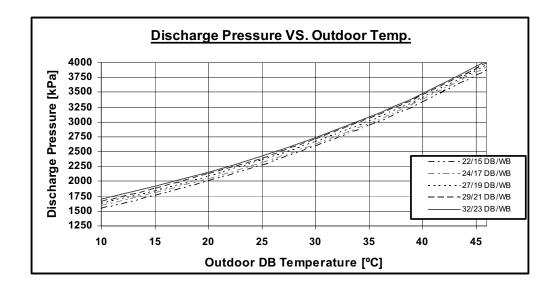


5.6.2 Heating – Test Mode

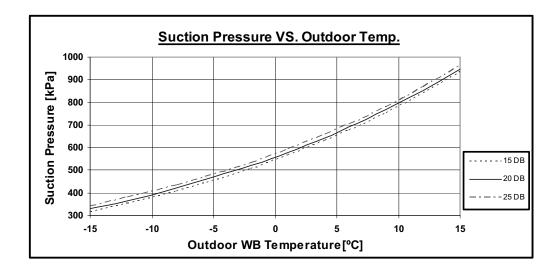


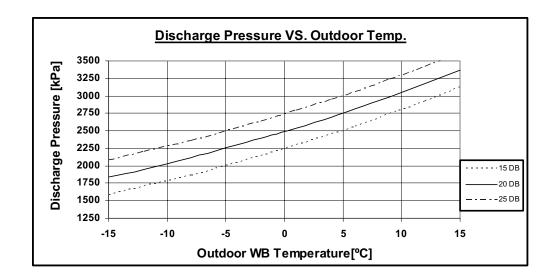


5-14 SM WDIDCI 1-A.2 GB


5.6.3 Model: Dakota 9 DCI Cooling – Test Mode

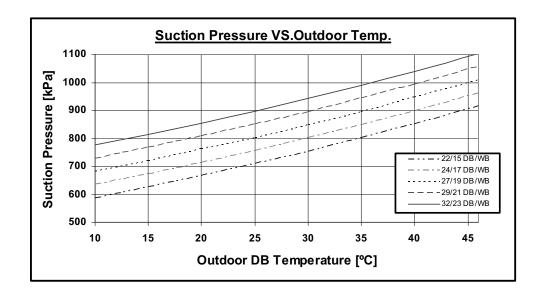

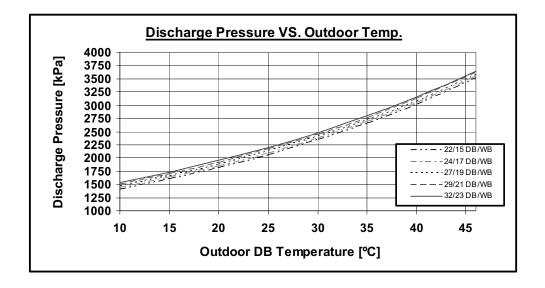


5.6.4 Heating – Test Mode

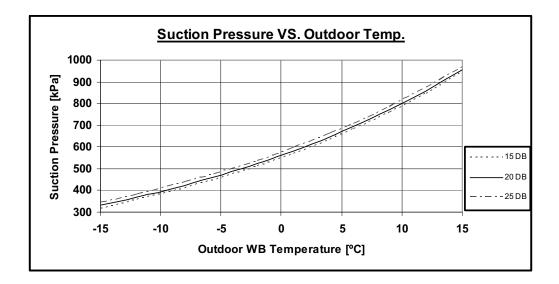


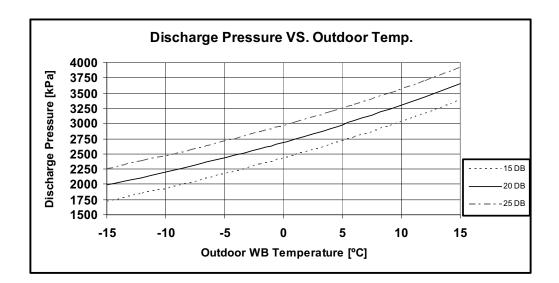


5-16 SM WDIDCI 1-A.2 GB


5.6.5 Model: Dakota 12 DCI Cooling – Test Mode

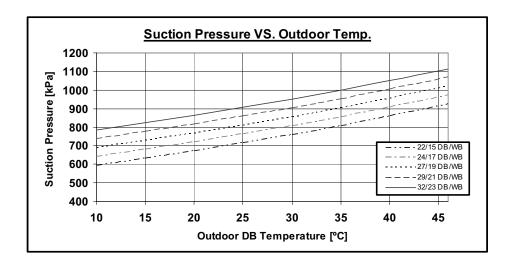

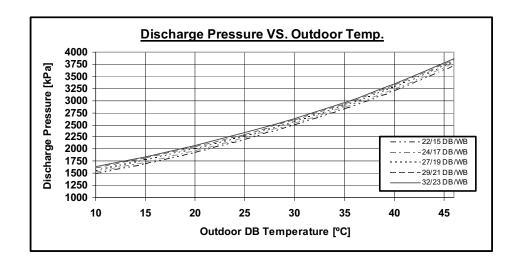


5.6.6 Heating – Test Mode

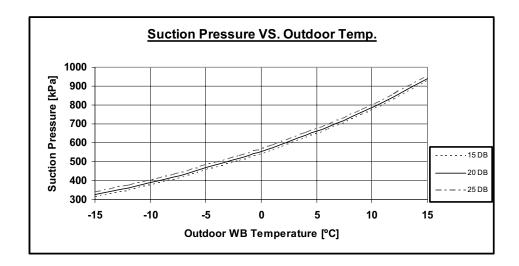


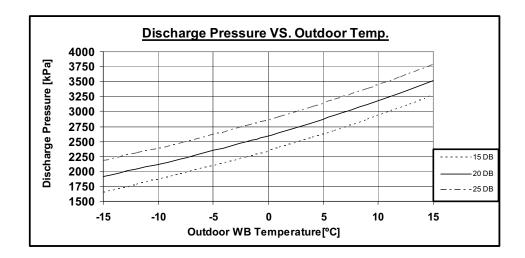


5-18 SM WDIDCI 1-A.2 GB


5.6.7 Model: Dakota 18 DCI Cooling – Test Mode

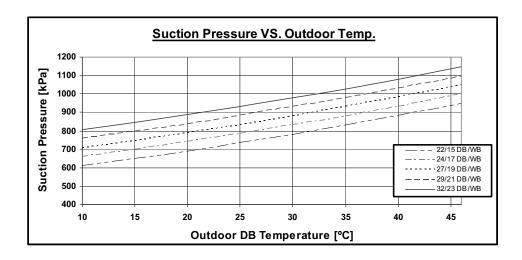

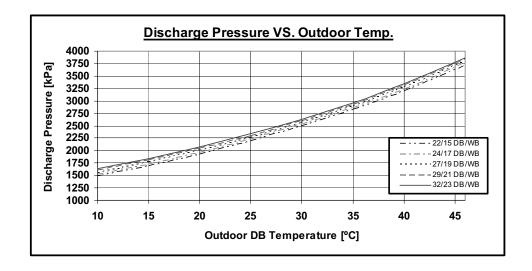

5.6.8 Heating – Test Mode

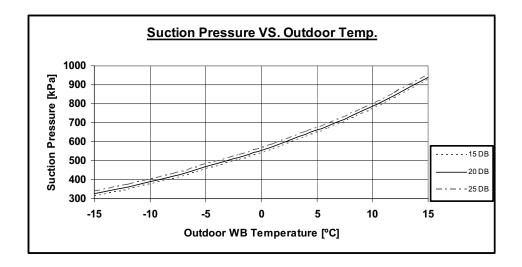

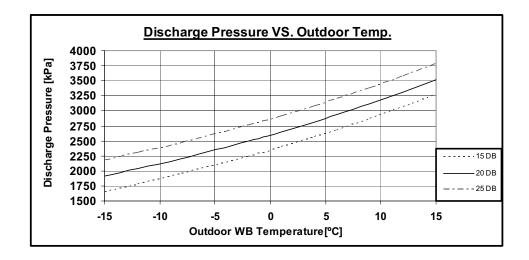

5-20 SM WDIDCI 1-A.2 GB

6. SOUND LEVEL CHARACTERISTICS

6.1 Sound Pressure Level

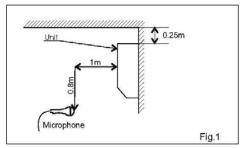


Figure 1. Wall Mounted

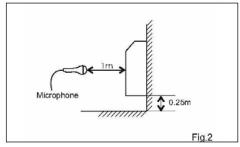


Figure 2. Floor Mounted

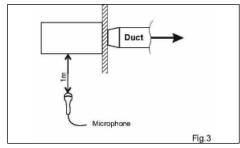


Figure 3. Ducted



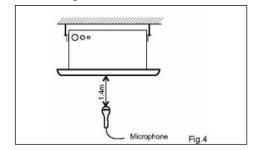


Figure 4. Cassette

6.2 Soud Pressure Level Spectrum (Measured as Figure 1)

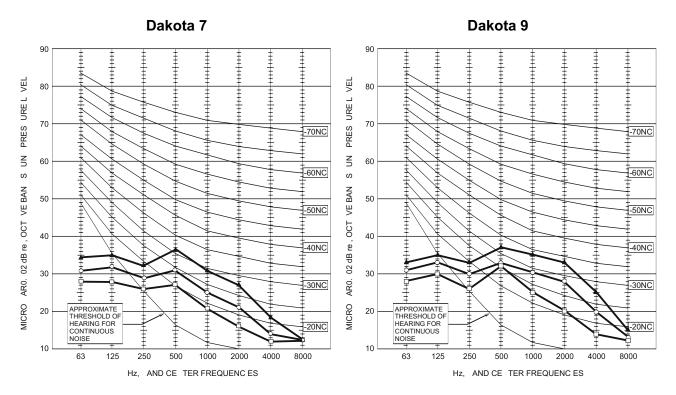


FAN SPEED	LINE
HI	
ME	ightharpoons
LO	

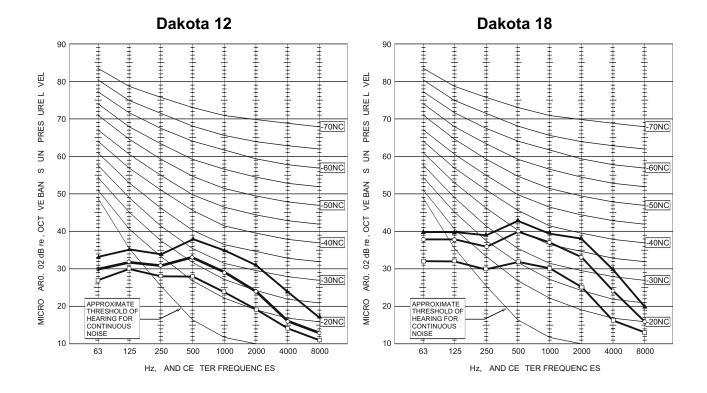



FAN SPEED	LINE
HI	
ME	ightharpoons
LO	

6.3 Outdoor units



6.4 Sound Pressure Level Spectrum (Measured as Figure 5)

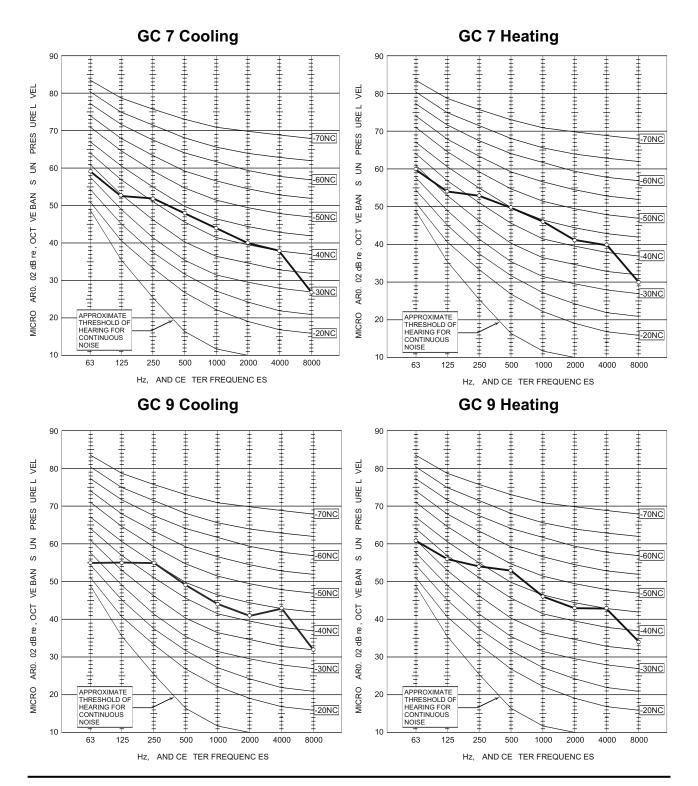

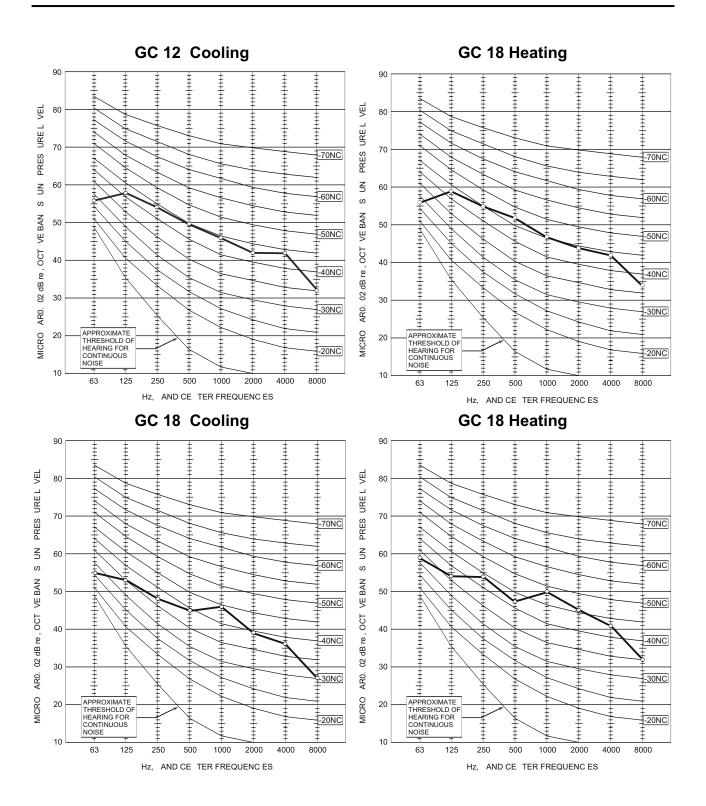

LINE
—

7. ELECTRICAL DATA

7.1 Single Phase Units

MODEL	Dakota 7	Dakota 9
Dawar Cupply	To indoor	To indoor
Power Supply	1PH,220-240V,50Hz	1PH,220-240V,50Hz
Max Current, A	5.2	6.3
Circuit Breaker,A	12	12
Power Supply Wiring No. X Cross Section mm²	3x1.0 mm²	3x1.0 mm²
Interconnecting Cable RC Model No. X Cross Section mm²	4x1.0 mm²	4x1.0 mm²

MODEL	Dakota 12	Dakota 18
Dawer County	To indoor	To indoor
Power Supply	1PH,220-240V,50Hz	1PH,220-240V,50Hz
Max Current, A	7.5	10.3
Circuit Breaker,A	15	20
Power Supply Wiring No. X Cross Section mm²	3x1.5 mm²	3x1.5 mm²
Interconnecting Cable RC Model No. X Cross Section mm²	4x1.5 mm²	5x1.5 mm²

⁽a) The Inrush current is the current when power is up (charging the DC capacitors of the outdoor unit controller).


(b) Starting current is the current when starting the compressor.

NOTE


Power wiring cord should comply with local lows and electrical regulations requirements

8. WIRING DIAGRAMS

8.1 Dakota 7, 9, 12 / GC 7, 9, 12 DCI

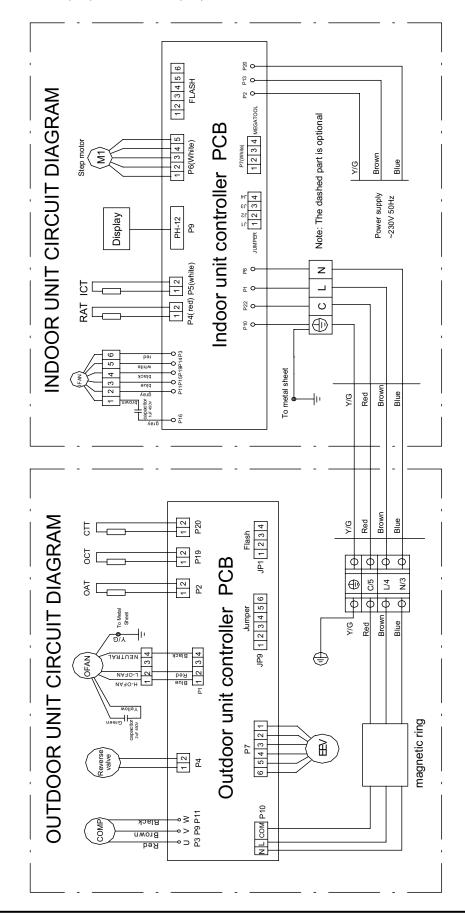


8.2 Dakota 18 / GC 18 DCI

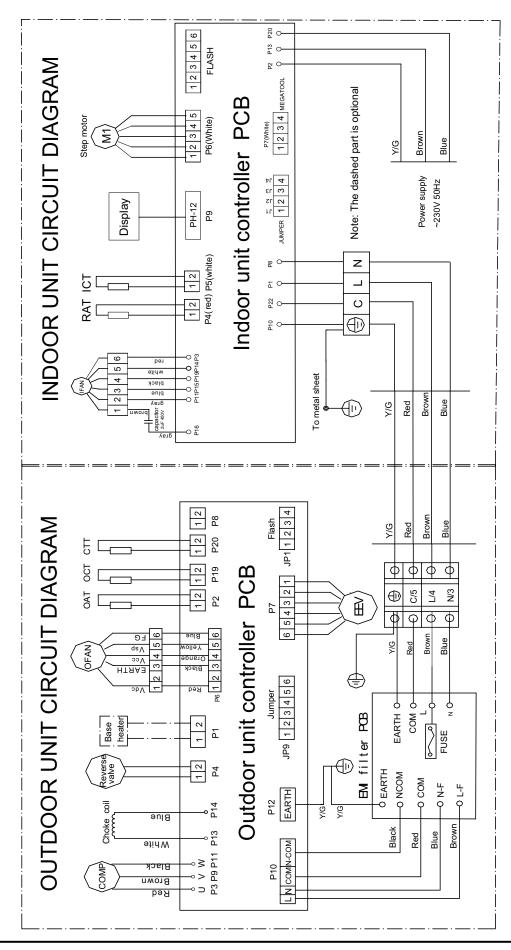


9. REFRIGERATION DIAGRAMS

9.1 Heat Pump Models


9.1.1 Dakota 7 / GC 7 DCI

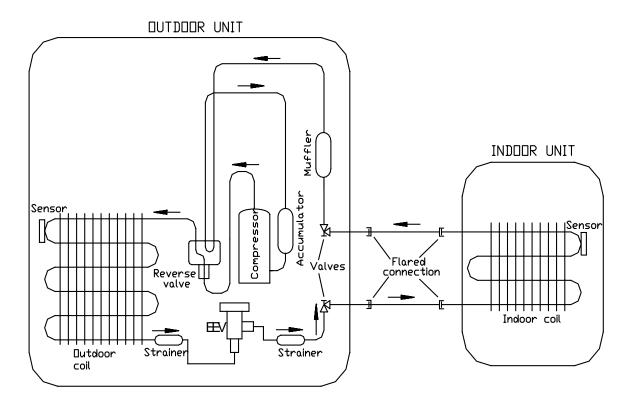


COOLING & DRY MODE

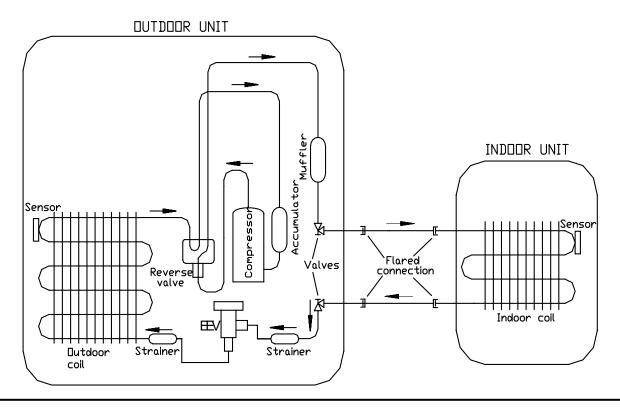

9.1.2 Dakota 9, 12 / GC 9, 12 DCI

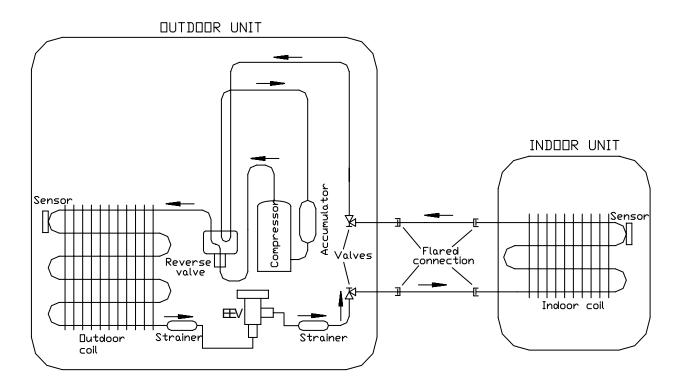


COOLING & DRY MODE

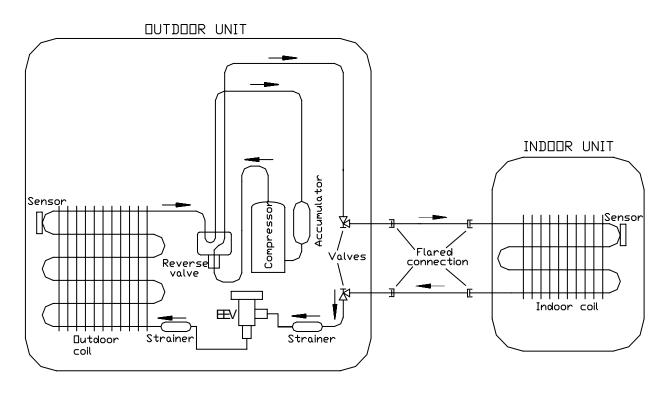


HEATING MODE

9.1.3 Dakota 18 / GC 18 DCI

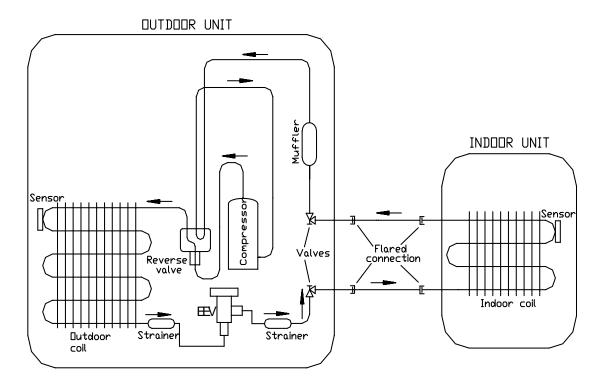



COOLING & DRY MODE

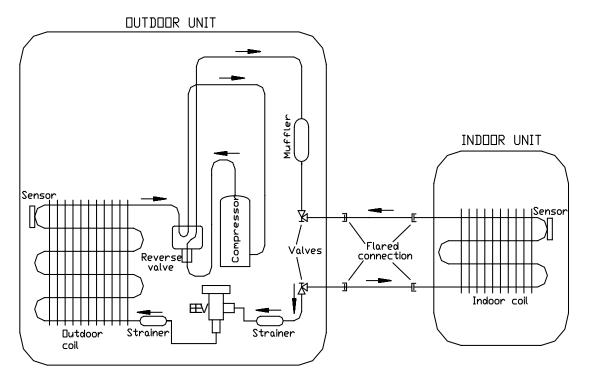

HEATING MODE

10. TUBING CONNECTIONS

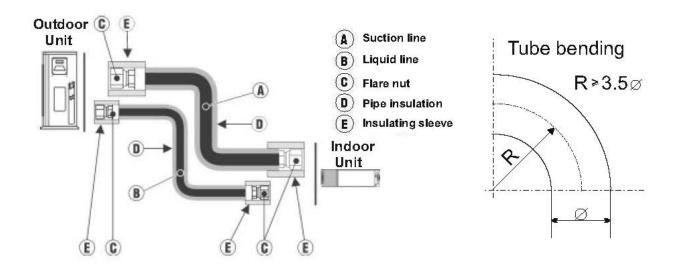


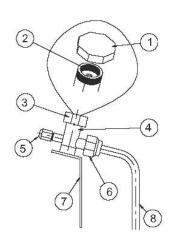

TUBE (Inch)	1/4"	3/8"	1/2"	5/8"	3/4"
TORQUE (Nm)					
Flare Nuts	11-13	40-45	60-65	70-75	80-85
Valve Cap	13-20	13-20	18-25	18-25	40-50
Service Port Cap	11-13	11-13	11-13	11-13	11-13

- 1. Valve Protection Cap-end
- 2. Refrigerant Valve Port (use Allen wrench to open/close)
- 3. Valve Protection Cap
- 4. Refrigerant Valve
- 5. Service Port Cap
- 6. Flare Nut
- 7. Unit Back Side
- 8. Copper Tube

When the outdoor unit is installed above the indoor unit an oil trap is required every 5m along the suction line at the lowest point of the riser. Incase the indoor unit is installed above the outdoor, no trap is required.

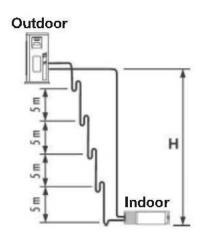

11. CONTROL SYSTEM

11.1 General Functions and Operating Rules

The DCI software is fully parametric. All the model dependent parameters are shown in Blue color and with Italic style [parameter].

The parameters values are given in the last section of this control logic chapter of the service manual.

11.1.1 System Operation Concept

The control function is divided between indoor and outdoor unit controllers. Indoor unit is the system 'Master', requesting the outdoor unit for cooling/heating capacity supply. The outdoor unit is the system 'Slave' and it must supply the required capacity unless it enters into a protection mode avoiding it from supplying the requested capacity.

The capacity request is transferred via indoor to outdoor communication, and is represented by a parameter called 'NLOAD'. NLOAD is an integer number with values between 0 and 127, and it represents the heat or cool load felt by the indoor unit.

11.1.2 Compressor Frequency Control (NLOAD setting)

The NLOAD setting is done by the indoor unit controller, based on a PI control scheme. The actual NLOAD to be sent to the outdoor unit controller, is based on the preliminary LOAD calculation, the indoor fan speed, and the power shedding function.

NLOAD limits as a function of indoor fan speed:

Indoor Fan Speed	Maximum NLOAD Cooling	Maximum NLOAD Heating
Low	Max NLOADIF1C	127
Medium	Max NLOADIF2C	127
High	Max NLOADIF3C	127
Turbo	Max NLOADIF4C	127
Auto	Max NLOADIF5C	127

11.1.3 Target Frequency Setting

The compressor target frequency is a function of the NLOAD number sent from the indoor controller and the outdoor air temperature.

Basic Target Frequency Setting:

NLOAD	Target Frequency
127	Maximum frequency
10 < NLOAD < 127	Interpolated value between minimum and maximum frequency
10	Minimum frequency
0	Compressor is stopped


Target frequency limits as a function of outdoor air temperature (OAT):

OAT Range	Cool mode limits	Heat mode limits
OAT < 6		No limit
6 ≤ OAT < 15	<i>MaxFreqAsOATC</i>	MaxFreqAsOAT1H
15 ≤ OAT < 28		MayErag A a O A T 2 U
28 ≤ OAT	No limit	MaxFreqAsOAT2H

11.1.4 Frequency Changes Control

Frequency change rate is 1 Hz/sec.

11.1.5 Compressor Starting Control

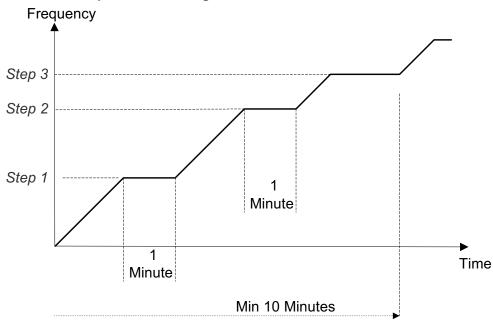

11.1.6 Minimum On and Off Time

3 minutes.

11.1.7 Indoor Fan Control

10 Indoor fan speeds are determined for each model. 5 speeds for cool/dry/fan modes and 5 speeds for heat mode.

When user sets the indoor fan speed to a fixed speed (Low/ Medium/ High), unit will operate constantly at set speed.

When Auto Fan is selected, indoor unit controller can operate in all speeds. The actual speed is set according to the cool/heat load.

11.1.8 Turbo Speed

The Turbo speed is activated during the first 30 minutes of unit operation when auto fan speed is selected and under the following conditions:

- Difference between set point and actual room temperature is bigger then 3 degrees.
- Room temperature > 22 for cooling, or < 25 for heating.

11.1.9 Heating Element Control

Heating element can be started if LOAD > 0.8 * MaximumNLOAD AND Indoor Coil temperature < 45.

The heating element will be stopped when LOAD < 0.5 * MaximumNLOAD OR if Indoor Coil temperature > 50.


11.1.10 Outdoor Fan Control

- The OFAN motor is an AC type that operates with 2 speeds (Low/High), controlled by Relays.
- OFAN speed depends on the compressor Target Frequency, and it's set according to the following table and graphs.
- OFAN can change its Speed only if it has been working in the current speed for at least 35 seconds:

Compressor		OFAN Spee	ed	
Target Frequency	Normal cases State A at cool / Heat	State B at cool	State C at cool	OAT>15°C at heat
Freq=0	OFF	OFF	OFF	OFF
10 ≤ Freq < OFLowFreq	Low	Low	Low	Low
OFLowFreq ≤ Freq< OFMedFreq	High	Low	Low	Low
OFMedFreq≤ Freq	High	Low	Low	High

Notes:

When OAT is faulty or disabled OFAN will follow 'Normal cases' rules (left column).



Note: Periorities A>B>C

- 1. OFLowFreq = OFLowFreqC in cool mode, and OFLowFreqH in heat mode.
- 2. OFMedFreq = OFMedFreqC in cool mode, and OFMedFreqH in heat mode.

The OFAN will be off when the compressor is off.

- An exception for the following rule is when compressor was operating in cool mode before stopped. In this case OFAN will remain on in low speed for 1 minute.
- Whenever the indoor unit is under indoor coil overheating protection, as long as the protection status is HzD2, the outdoor fan will change to off. It will be enabled to be back on when the status of this protection becomes normal.
- Upon receiving night mode signal (ON), through communication, the OFAN will be operating in LOW speed only in Cool. It will be back to its normal operation when receiving OFF signal.

11.1.1 EEV (electronic Expansion valve) Control

EEV opening is defined as EEV = EEV_{OL} + EEV_{CV}

 EEV_OL is the initial EEV opening as a function of the compressor frequency, operation mode, unit model and capacity.

EEV_{CV} is a correction value for the EEV opening that is based on the compressor temperature.

During the first 5 minutes of compressor operation $EEV_{cv} = 0$.

Once the first 5 minutes are over, the correction value is calculated as follow: $EEV_{CV}(n) = EEV_{CV}(n-1) + EEV_{CTT}$

EEV_{CTT} is the correction based on the compressor temperature. A target compressor temperature is set depending on frequency and outdoor air temperature, and the actual compressor temperature is compared to the target temperature to set the required correction to the EEV opening.

11.1.2 Reversing Valve (RV) Control

Reversing valve is on in heat mode.

Switching of RV state is done only after compressor is off for over 3 minutes.

11.2 Fan Mode

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed. In AutoFan user setting, fan speed will be adjusted automatically according to the difference between actual room temperature and user set point temperature.

11.3 Cool Mode

NLOAD is calculated according to the difference between actual room temperature and user set point temperature by PI control.

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed.

In AutoFan user setting, fan speed will be adjusted automatically according to the calculated NLOAD.

11.4 Heat Mode

NLOAD is calculated according to the difference between actual room temperature and user set point temperature by PI control.

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed.


In AutoFan user setting, fan speed will be adjusted automatically according to the calculated NLOAD.

11.4.1 Temperature Compensation

4 degrees are reduced from RT sensor temperature reading (excluding I-Feel mode), to compensate for temperature difference between high and low areas in the heated room, and due to coil heat radiation on RT sensor.

11.4.2 Indoor Fan Control in Heat Mode

Indoor fan speed depends on the indoor coil temperature:

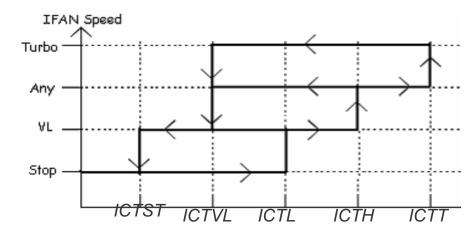

11.5 Auto Cool/Heat Mode

When in auto cool heat mode unit will automatically select between cool and heat mode according to the difference between actual room temperature and user set point temperature (ΔT). Unit will switch from cool to heat when compressor is off for 3 minutes, and $\Delta T < -3$. Unit will switch from heat to cool when compressor is off for 5 minutes, and $\Delta T < -3$.

11.6 Dry Mode

As long as room temperature is higher then the set point, indoor fan will work in low speed and compressor will work between 0 and *MaxNLOADIF1C* Hz.

When the room temperature is lower than the set point, compressor will be switched OFF and indoor fan will cycle 3 minutes OFF, 1 minute ON.

11.7 Protections

There are 5 protection codes.

Normal (Norm) – unit operate normally.

Stop Rise (SR) – compressor frequency can not be raised but does not have to be decreased.

HzDown1 (D1) – Compressor frequency is reduced by 2 to 5 Hz per minute.

HzDown2 (D2) – Compressor frequency is reduced by 5 to 10 Hz per minute.

Stop Compressor (SC) – Compressor is stopped.

11.7.1 Indoor Coil Defrost Protection


	ICT Trend				
ICT	Fast Increasing	Increasing	No change	Decreasing	Fast Decreasing
ICT < -2	SC	SC	SC	SC	SC
-2 ≤ ICT < 0	D1	D1	D2	D2	D2
0 ≤ ICT < 2	SR	SR	D1	D2	D2
2 ≤ ICT < 4	SR	SR	SR	D1	D2
4 ≤ ICT < 6	Norm	Norm	SR	SR	D1
6 ≤ ICT < 8	Norm	Norm	Norm	SR	SR
8 ≤ ICT	Normal				

11.7.2 Indoor Coil over Heating Protection

	ICT Trend				
ICT	Fast Decreasing	Decreasing	No Change	Increasing	Fast Increasing
ICT > 55	SC	SC	SC	SC	SC
53 < ICT ≤ 55	D1	D1	D2	D2	D2
49 < ICT ≤ 53	SR	SR	D1	D2	D2
47 < ICT ≤ 49	SR	SR	SR	D1	D2
45 < ICT ≤ 47	Norm	Norm	SR	SR	D1
43 < ICT ≤ 45	Norm	Norm	Norm	SR	SR
ICT ≤ 43	Normal				


11.7.3 Compressor over Heating Protection

Compressor temperature can be in one of 5 control zones (4 in protection, and 1 normal), according to the following chart.

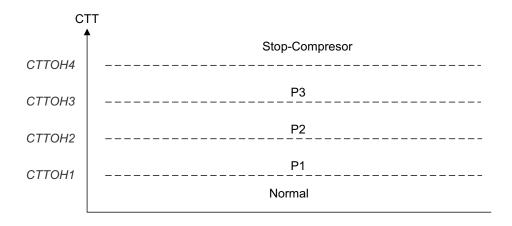

Control Status	Compressor Temperature Increases	Else	
P1	Norm	SR	
P2	D1	SR	
P3	D2	D1	
Stop Compressor	SC		

11.7.4 Compressor over Current Protection

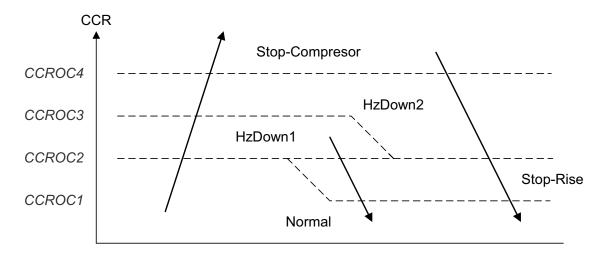

11.7.5 Heat Sink Over Heating Protection (NA for DCI 25 and 35)

HST		HST Trend	
ПОТ	Decreasing	No Change	Increasing
HST > 90	SC	SC	SC
85 < HST ≤ 90	D1	D2	D2
82 < HST ≤ 85	SR	D1	D2
80 < HST ≤ 82	SR	SR	D1
78 < HST ≤ 80	Norm	Norm	SR
HST≤78	Normal		

11.7.6 Outdoor Coil Deicing Protection

Deicing Starting Conditions

Deicing operation will start when either one of the following conditions exist:

- Case 1: OCT < OAT 8 AND TLD > DI
- Case 2: OCT < OAT 12 AND TLD > 30 minutes.
- Case 3: OCT is Invalid AND TLD > DI
- Case 4: Unit is just switched to STBY AND OCT < OAT 8
- Case 5: NLOAD = 0 AND OCT < OAT -8

OCT - Outdoor Coil Temperature

OAT – Outdoor Air Temperature


TLD - Time from Last Deicing

DI – Deicing Interval (Time Interval Between Two Deicing)

Deicing interval time when compressor is first started in heat mode, is 10 minutes if OCT < -2, and is 40 minutes in other cases.

Deicing interval time is changed (increased/ decreased in 10 minutes steps) as a function of deicing time. If deicing time is shorter then former deicing time, the deicing interval time will be increased. If deicing time is longer then former deicing time, the deicing interval time will be decreased.

Deicing Protection Procedure

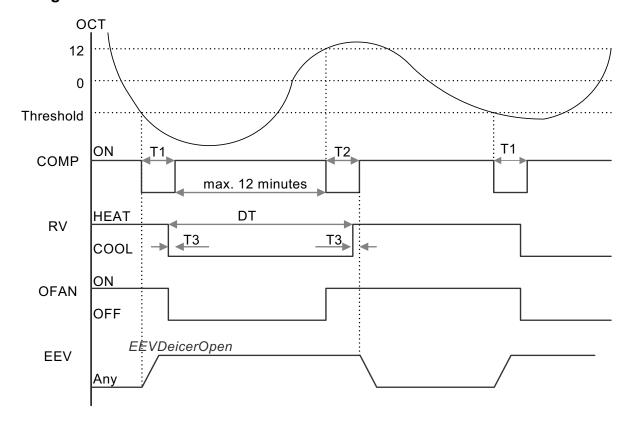

T1 =60 seconds, T2 = 36 seconds, T3 = 6 seconds


11.8 Operating the Unit from the Mode Button

Forced operation allows to start, stop and operate in Cooling or Heating, in pre-set temperature according to the following table:

Forced operation Mode	Pre-set Temperature		
Cooling	20°C		
Heating	28°C		

11.9 On Unit Controls and Indicators

The following is schematic drawing for the display:

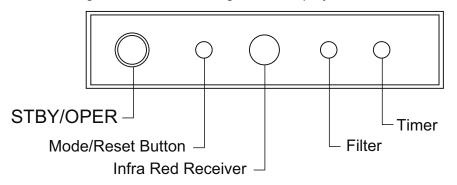

STAND BY INDICATOR	 Lights up when the Air Conditioner is connected to power and the mode is STBY. Blinks for 3 seconds, when the system is switched to Heat Mode by using the Mode/Reset Switch on the unit (the operation indicator will be off during this blinking time). 	
OPERATION INDICATOR	 Lights up during operation mode (except for item in STBY indicator). Blinks for 300 msec., to announce that a R/C infrared signal has been received and stored. Blinks continuously during protections (according to the relevant spec section). Blinks for 3 seconds when the system is switched to Cool Mode 	
TIMER INDICATOR	by using the Mode/Reset Switch on the unit. Lights up during Timer and Sleep operation.	
FILTER INDICATOR Lights up when Air Filter needs to be cleaned.		
MODE / RESET BUTTON	As long as the filter Led is off, the Mode/Reset button functions as Mode switch. Once filter Led is on, the Mode/Reset button functions as Reset switch. Mode Function: Every short pressing , the next operation mode is selected, in this order: SB → Cool Mode → Heat Mode → SB → In long pressing system enters diagnostic mode (refer to diagnostic mode Sect.) Reset Function: For short pressing: When Filter LED is on, it turns off the filter indicator.	

Notes

- 1. Pressing time is defined as the time between press and release.
- 2. If pressing time is one second or less press is considered as short pressing.
- 3. If pressing time is three seconds or longer pressing is considered as long pressing. In between, pressing is undetermined and system will not respond to pressing.
- 4. For the LED functionality during diagnostics, refer to the diagnostics Sect.

11-10 SM WDIDCI 1-A.2 GB

11.10 Outdoor Unit Controller Indicators

Unit has three LED's. SB LED, STATUS LED, FAULT LED.

SB LED is ON when power is ON (230 VAC),

STATUS LED is ON when COMP is ON, and Blinks according to diagnostics mode definitions when either fault or protection occurs.

FAULT LED Blinks according to diagnostics mode definitions when either fault or protection occurs.

11.11 Test Mode

11.11.1 Entering Test Mode

System can enter Test mode in two ways:

- Automatically when the following conditions exists for 30 minutes continuously:
 - Mode = Cool, Set point = 16, Room temperature = 27±1, Outdoor temperature = 35±1

Or

- Mode = Heat, Set point = 30, Room temperature = 20±1, Outdoor temperature = 7±1
- Manually when entering diagnostics with the following settings:

•

- Mode = Cool, Set point = 16
- Mode = Heat, Set point = 30

11.11.2 Unit Operation in Test Mode

In test mode, the unit will operate in fixed settings according to the indoor fan speed setting:

Indoor Fan Speed Setting	Unit Setting
Low	Minimum Capacity Setting
High	Nominal Capacity Setting
Auto	Maximum Capacity Setting

During test mode, protections are disabled, except for stop compressor status.

SM WDIDCI 1-A.2 GB 11-11

11.12 SW Parameters

11.12.1 Indoor Units SW Parameters

General Parameters for All Models:

Parameters defining the indoor fan speed as a function of Indoor Coil temperature in heat mode (ICT):

ICTST Speed	ICT to stop indoor fan	25
ICTVLSpeed	ICT to go down to very low speed	28
ICTLSpeed	ICT to start in very low speed	30
ICTHSpeed	ICT to start in increase speed from very low	32
ICTTSpeed	ICT to enable Turbo fan speed	40
Parameters for defre	ost protection:	
ICTDef1	ICT to go back to normal	8
ICTDef2	ICT to 'stop rise' when ICT decrease	6
ICTDef3	ICT to 'stop rise' when ICT is stable	4
ICTDef4	ICT to 'Hz Down' when ICT decrease	2
ICTDef5	ICT to 'Hz Down' when ICT is stable	0
ICTDef6	ICT to stop compressor	-2
Parameters for indo	or coil over heating protection:	
ICTOH1	ICT to go back to normal	45
ICTOH2	ICT to 'stop rise' when ICT increase	48
ICTOH3	ICT to 'stop rise' when ICT is stable	52
ICTOH4	ICT to 'Hz Down' when ICT increase	55
ICTOH5	ICT to 'Hz Down' when ICT is stable	60
ICTOH6	ICT to stop compressor	62

Model Depended Parameters:

Downworten name		Models				
Parameter name	22	25	35			
NLOAD limits as a function of selected indoor fan speed						
MaxNLOADIF1C	40	40	40			
MaxNLOADIF2C	55	51	55			
MaxNLOADIF3C	120	90	90			
MaxNLOADIF4C	127	127	127			
MaxNLOADIF5C	127	127	127			
	Indoor Fan s	peeds				
IFVLOWC	700	700	700			
IFLOWC	800 850		850			
IFMEDC	950	1050	1000			
IFHIGHC	1050	1200	1200			
IFTURBOC	1150	1250	1250			
IFVLOWH	700	700	700			
IFLOWH	850	950	950			
IFMEDH	1000	1050	1100			
IFHIGHH	1100	1250	1250			
IFTURBOH	1200	1350 13				
Nor	ninal Compress	or Frequency				
NomLoadC	40	51	61			
NomLoadH	55	58	62			

11-12 SM WDIDCI 1-A.2 GB

11.12.2 Outdoor Units SW Parameters

Parameter Name	DCI25	DCI35	DCI 50			
Compressor Parameters						
MinFreqC	30	35	35			
MaxFreqC	52	62	70			
MinFreqH	30	35	40			
MaxFreqH	60	73	66			
Step1Freq		45	45			
Step2Freq		55	55			
Step3Freq		65	65			
Frequency limits	s as a function of	outdoor air temp	erature			
MaxFreqAsOATC		50	60			
MaxFreqAsOAT1H	axFreqAsOAT1H 58		60			
MaxFreqAsOAT2H		50	50			
Comp	ressor Over Heat	ting Protection				
CTTOH1	94	94	94			
CTTOH2	98	98	98			
СТТОН3	102	102	102			
CTTOH4	105	105	105			
CTTOH5	120	120	120			
Compre	essor Over Curre	nt Protection [A]				
CCR01	40	40	40			
CCR02	42	42	42			
CCR03	44	44	44			
CCR04	47	47 47				
	Outdoor Fan Spe	ed (RPM)				
OFLOWC	610	600	600			
OFMEDC	700	760	760			

SM WDIDCI 1-A.2 GB 11-13

Airwell

11.12.3 Outdoor Units SW Parameters

Parameter Name	DCR22	DCR25	DCR 35	DCR50			
Compressor Parameters							
MinFreqC	35	35	35	20			
MaxFreqC	52	62	70	77			
MinFreqH	38	35	40	26			
MaxFreqH	67	73	66	79			
Step1Freq	40	43	45	60			
Step2Freq	50	55	55	70			
Step3Freq	63	63	65	80			
Frequency I	imits as a fun	ction of outdo	or air temper	ature			
MaxFreqAsOATC	44	50	60	64			
MaxFreqAsOAT1H	53	58	60	75			
MaxFreqAsOAT2H	45	50	50	60			
C	ompressor Ov	ver Heating Pi	rotection				
CTTOH1	94	94	94	94			
CTTOH2	98	98	98	98			
СТТОН3	102	102	102	102			
CTTOH4	105	105	105	105			
CTTOH5	120	120	120	120			
Cor	mpressor Ove	er Current Pro	tection [A]				
CCR01	28	35	40	100			
CCR02	30	37	42	105			
CCR03	32	39	44	108			
CCR04	35	42	47	102			
	Outdoor F	an Speed (RF	PM)				
OFLOWC	610	600	600	600			
OFMEDC				760			
OFMAXC	700	760	760	920			

11-14 SM WDIDCI 1-A.2 GB

12. TROUBLESHOOTING

WARNING!!!

When Power Up – the whole outdoor unit controller, including the wiring, is under HIGH VOLTAGE!!!

Never open the Outdoor unit before turning off the Power!!! When turned off, the system is still charged (400V)!!! It takes about 4 Min. to discharge the system.

Touching the controller before discharging may cause an electrical shock!!!

12.1 Single Split system failures and corrective actions

No	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
1	Power supply indicator (Red LED) does not light up.	No power supply	Check power supply. If power supply is OK, check display and display wiring. if OK, replace controller.
2	Unit does not respond to remote control message	Remote control message not reached the indoor unit	Check remote control batteries, if batteries are OK, check display and display wiring, if OK, replace display PCB. If still not OK replace controller.
3	Unit responds to remote control message but Operate indicator (Green LED) does not light up	Problem with display PCB	Replace display PCB. If still not OK replace controller.
	Indoor fan does not start (louvers are opened and	Unit in heat mode and coil is still not warm.	Change to cool mode and check.
4	Green LED does light up)	Problem with PCB or capacitor	Change to high speed and Check power supply to motor is higher than 130VAC (for triack controlled motor) or higher than 220VAC for fixed speed motors, if OK replace capacitor, if not replace controller
5	Indoor fan works when unit is OFF, and indoor fan speed is not changed by remote control command.	PCB problem	Replace controller
6	Compressor does not start	Electronics control problem or protection	Perform diagnostics, and follow the actions described.
7	Compressor stops during operation and Green LED remains on	Electronic control or power supply problem	Perform diagnostics ,and follow the actions described.
8	Compressor is on but outdoor fan does not work	Problem with outdoor electronics or outdoor fan	Check outdoor fan motor according to the procedure in section, if not OK replace controller

No	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
9	Unit works in wrong mode (cool instead of heat or heat instead of cool)	Electronics or power connection to RV	Check RV power connections, if OK, Check RV operation with direct 230VAC power supply, if OK, Replace outdoor controller.
10	All components are operating properly but no cooling or no heating	Refrigerant leak	Check refrigeration system.
11	Compressor is over heated and unit does not generate capacity	EEV problem	Check EEV
12	Units goes into protections and compressor is stopped with no clear reason	Control problem or refrigeration system problem	Perform diagnostics and follow the actions described.
13	Compressor motor is generating noise and no suction occurs	Phase order to compressor is wrong	Check compressor phase order.
14	Water leakage from indoor unit	Indoor unit drainage tube is blocked	Check and open drainage tube.
15	Freezing of outdoor unit in heat mode and outdoor unit base is blocked with ice		Connect base heater.
16	Unit operates with wrong fan speeds or wrong frequency	Wrong jumper settings	Perform diagnostics, and check if units is operating by EEPROM parameters.

12.2 Checking the refrigeration system

Checking system pressures and other thermodynamic measures should be done when system is in Test Mode (in Test mode, system operates in fixed settings). The performance curves given in this manual are given for unit performance in test mode when high indoor fan speed is selected.

Entering test mode:

Set unit to Cool/16 degrees/High indoor fan speed, or Heat/30 degrees/High indoor fan speed, and enter diagnostics.

12.3 Judgment by Indoor/Outdoor Unit Diagnostics

Enter diagnostics mode - press for five seconds Mode/Reset button in any operation mode. Acknowledgment is by 3 short beeps and lights of all Display LED's. Then, The units will enter into Indoor and Outdoor unit diagnostic modes.

During the Outdoor unit diagnostics all three Indoor LED's (STBY/Operate, Filter and Timer) are blinking. When Indoor diagnostics is displayed, all three LED's (STBY/Operate, Filter and Timer) are ON.

When system enters diagnostics mode, only one fault code is shown. Order of priority is from the lower to the higher number. Diagnostics is continuously ON as long as power is ON. The current system operation mode will not be changed.

If no fault occurred in the system, no fault code will be displayed during normal operation mode. The last fault code will be displayed even if the system has recovered from that fault. The last fault will be deleted from the EEPROM after the system has exit diagnostics mode.

In diagnostics mode, system fault / status will be indicated by blinking of Filter & Timer LEDs.

The coding method will be as follows:

Filter LED will blink 5 times in 5 seconds, and then will be shut off for the next 5 seconds. Timer LED will blink during the same 5 seconds according to the following Indoor / Outdoor unit tables:

Note: 0 - OFF, 1-ON

12.3.1 Indoor unit Diagnostics

No	Problem	5	4	3	2	1
1	RT-1 is disconnected	0	0	0	0	1
2	RT-1 is shorted	0	0	0	1	0
3	RT-2 is disconnected	0	0	0	1	1
4	RT-2 is shorted	0	0	1	0	0
5	Reserved	0	0	1	0	1
7	Communication mismatch	0	0	1	1	1
8	No Communication	0	1	0	0	0
9	No Encoder	0	1	0	0	1
10	Reserved	0	1	0	1	0
11	Outdoor Unit Fault	0	1	0	1	1
	Reserved					
17	Defrost protection	1	0	0	0	1
18	Deicing Protection	1	0	0	1	0
19	Outdoor Unit Protection	1	0	0	1	1
20	Indoor Coil HP Protection	1	0	1	0	0
21	Reserved	1	0	1	0	1
22	Reserved					
24	EEPROM Not Updated	1	1	0	0	0
25	Bad EEPROM	1	1	0	0	1
26	Bad Communication	1	1	0	1	0
27	Using EEPROM data	1	1	0	1	1
28	Model A	1	1	1	0	0
29	Model B	1	1	1	0	1
30	Model C	1	1	1	1	0
31	Model D	1	1	1	1	1

SM WDIDCI 1-A.2 GB 12-3

12.3.2 Indoor unit diagnosis and corrective actions

No.	Fault	Probable Cause	Corrective Action
1	Sensor failures of all types		Check sensor connections or replace sensor
2	Communication mismatch	Indoor and Outdoor controllers are with different versions	Replace Indoor controller
3	No Communication	Communication or grounding wiring is not good.	Check Indoor to Outdoor wiring and grounding
4	No Encoder	Indoor electronics or motor	Check motor wiring, if ok, replace motor, if still not ok, replace Indoor controller.
5	Outdoor Unit Fault	Outdoor controller problem	Switch to Outdoor diagnostics.
6	EEPROM Not Updated	System is using ROM parameters and not EEPROM parameters	No action, unless special parameters are required for unit operation.
7	Bad EEPROM		No action, unless special parameters are required for unit operation.
8	Bad Communication	Communication quality is low reliability	Check Indoor to Outdoor wiring and grounding
9	Using EEPROM data	No problem. System is using EEPRRROM parameters	

12.3.3 Outdoor unit Diagnostics:

DCR 22/25/35 Diagnostics

No	Problem	5	4	3	2	1
1	OCT is disconnected	0	0	0	0	1
2	OCT is shorted	0	0	0	1	0
3	CTT is disconnected	0	0	0	1	1
4	CTT is shorted	0	0	1	0	0
5	reserved					
6	reserved					
7	OAT is disconnected (when enabled)	0	0	1	1	1
8	OAT is shorted (when enabled)	0	1	0	0	0
9	reserved					
10	reserved					
11	IPM Fault	0	1	0	1	1
12	reserved					
13	DC under voltage	0	1	1	0	1
14	DC over voltage	0	1	1	1	0
15	AC under voltage	0	1	1	1	1
16	Indoor / Outdoor unit Communication mismatch	1	0	0	0	0
17	No Communication	1	0	0	0	1
18	Reserved					
19	Reserved					
20	Reserved					
21	Deicing	1	0	1	0	1
22	Compressor Over Heating	1	0	1	1	0
23	Compressor Over Current	1	0	1	1	1
24	Reserved					
25	Reserved					
26	Copressor Lock	1	1	0	1	0
27	Bad Communication	1	1	0	1	1
20	Heat sink Over Heating	1	0	1	0	0
21	Deicing	1	0	1	0	1
22	Compressor Over Heating	1	0	1	1	0
26	Copressor Lock	1	1	0	1	0
27	Bad Communication	1	1	0	1	1

DCR50 diagnostics:

No	Problem	5	4	3	2	1
1	OCT is disconnected		0	0	0	1
2	OCT is shorted		0	0	1	0
3	CTT is disconnected	0	0	0	1	1
4	CTT is shorted	0	0	1	0	0
5	HST is disconnected (when enabled)	0	0	1	0	1
6	HST is shorted (when enabled)	0	0	1	1	0
7	OAT is disconnected (when enabled)	0	0	1	1	1
8	OAT is shorted (when enabled)	0	1	0	0	0
9	TSUC is disconnected (when enabled)	0	1	0	0	1
10	TSUC is shorted (when enabled)	0	1	0	1	0
11	IPM Fault	0	1	0	1	1
12	Bad EEPROM		1	1	0	0
13	DC under voltage		1	1	0	1
14	DC over voltage	0	1	1	1	0
15	AC under voltage	0	1	1	1	1
16	Indoor / Outdoor unit Communication mismatch	1	0	0	0	0
17	No Communication	1	0	0	0	1
18	Reserved	1	0	0	1	0
20	Heat sink Over Heating	1	0	1	0	0
21	Deicing	1	0	1	0	1
22	Compressor Over Heating	1	0	1	1	0
23	Compressor Over Current		0	1	1	1
24	No OFAN Feedback		1	0	0	0
25	OFAN Locked		1	0	0	1
26	Compressor Lock	1	1	0	1	0
27	Bad Communication	1	1	0	1	1

12.3.4 Outdoor unit diagnosis and corrective actions

NO	Fault	Probable Cause	Corrective Action
1	Sensors failures of all types		Check sensors connections or replace sensors.
2	IPM Fault	Electronics HW problem	Check all wiring and jumper settings, if OK, replace electronics.
3	Bad EEPROM		No action, unless special parameters are required for unit operation.
4	DC under/over Voltage	Electronics HW problem	Check outdoor unit power supply voltage
5	AC under Voltage		Check outdoor unit power supply voltage
6	Indoor / Outdoor unit Communication mismatch	Indoor and Outdoor controllers are with different versions	Replace Indoor controller
7	No Communication	Communication or grounding wiring is not good.	Check Indoor to Outdoor wiring and grounding
8	Compressor Lock		Switch unit to STBY and restart
9	Bad Communication	Communication quality is low reliability	Check Indoor to Outdoor wiring and grounding

12.4 Judgment by MegaTool

MegaTool is a special tool to monitor the system states. Using MegaTool requires:

- A computer with RS232C port.
- A connection wire for MegaTool.
- A special MegaTool software.

Use MegaTool according to following procedure:

- Setup MegaTool software: copy the software to the computer.
- Connect RS232C port in computer with MegaTool port in Indoor/Outdoor unit controller by the connection wire.
- Run the software and choose the COM port, you can monitor the A/C system state in monitor tab.

12.5 Simple procedures for checking the Main Parts

12.5.1 Checking Mains Voltage.

Confirm that the Mains voltage is between 198 and 264 VAC. If Mains voltage is out of this range, abnormal operation of the system is expected. If in range check the Power (Circuit) Breaker and look for broken or loosed cable lugs or wiring mistake(s).

12.5.2 Checking Power Input.

If Indoor unit power LED is unlighted, power down the system and check the fuse of the Indoor unit. If the fuse is OK replace the Indoor unit controller. If the fuse has blown, replace the fuse and power up again. Checking Power Input procedure for the Outdoor unit is the same as with the Indoor unit.

12.5.3 Checking the Outdoor Fan Motor.

Enter Test Mode (where the OFAN speed is high)
Check the voltage between lead wires according to the normal value as following:

- Between red wire and black wire: 310VDC +/- 20V
- Between orange wire and black wire: 15VDC +/- 1V
- Between yellow wire and black wire: 2-6VDC

12.5.4 Checking the Compressor.

The compressor is brushless permanence magnetic DC motor. Three coil resistance is same. Check the resistance between three poles. The normal value should be below 0.5 ohm (TBD).

12.5.5 Checking the Reverse Valve (RV).

Running in heating mode, check the voltage between two pins of reverse valve connector, normal voltage is 220VAC.

12.5.6 Checking the electrical expansion valve (EEV).

The EEV has two parts, drive part and valve. The drive part is a step motor; it is ringed on the valve. Check the drive voltage (12VDC). When Outdoor unit is power on, EEV shall run and have click and vibration.

12.6 Precaution, Advise and Notice Items

12.6.1 High voltage in Outdoor unit controller.

Whole controller, including the wires that are connected to the Outdoor unit controller may have the potential hazard voltage when power is on. Touching the Outdoor unit controller may cause an electrical shock.

Advise: Don't touch the naked lead wire and don't insert finger, conductor or anything else into the controller when power is on.

12.6.2 Charged Capacitors


Three large-capacity electrolytic capacitors are used in the Outdoor unit controller. Therefore, charging voltage (380VDC) remains after power down. Discharging takes about four minutes after power is off. Touching the Outdoor unit controller before discharging may cause an electrical shock.

12.6.3 Additional advises

- When disassemble the controller or the front panel, turn off the power supply.
- When connecting or disconnecting the connectors on the PCB, hold the whole housing, don't pull the wire.

13. EXPLODED VIEWS AND SPARE PARTS LISTS

13.1 Indoor Unit: Dakota 7, 9, 12 DCI

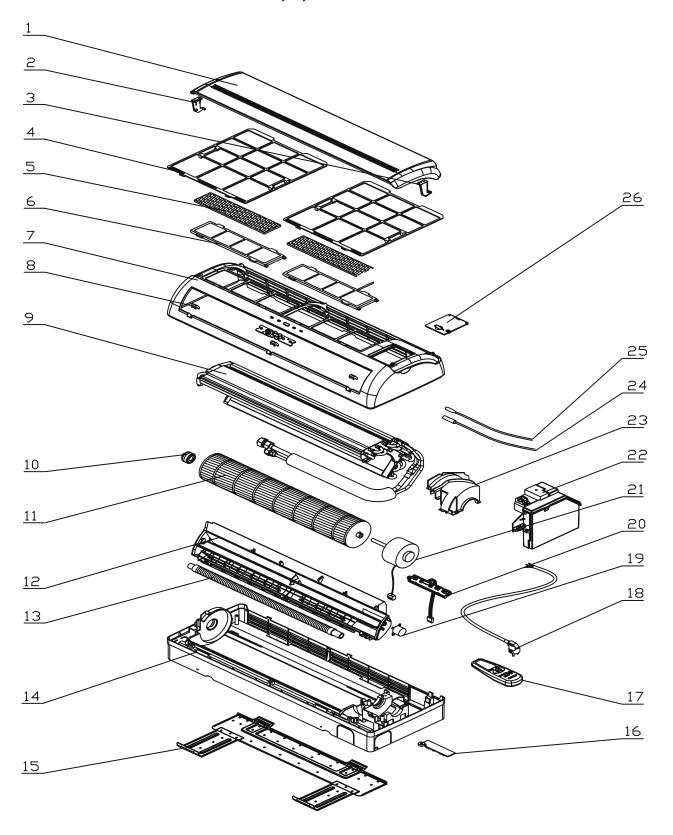


13.2 Intdoor Unit: Dakota 7, 9 DCI

No.	Part No.	Name	Quan.
1	453037000	Grill A / Dakota 7,9	1
2	453100500	Grill L axis	1
3	453100600	Grill R axis	1
4	453036500	Filter for Dakota 7/9	2
7	465720000	Silk-screen front frame for Electra	1
8	4525987	SCREW COVER	3
9	453070701	Evap. System Assy./Dakota 7,9v	1
10	4523526	BERAING ASSY FAN	1
11	4523523	FAN ASSY PLASTIC	1
12	452784400	IOD-7,9 Air Outlet Assy. (no wire)	1
13	4523693	DRAIN HOSE	1
14	4526659	REAR PANEL ASSY	1
15	453027400	Mount Bracket Assy./Alfa 7,9	1
16	4526000	TUBE CLIP	1
17	453130700	Remote Controller RC-7Silver)EHK P/N 977-800-40	1
18	4526133	Power cord cable	1
19	4523507	Step motor	1
20	453089600	Display assy. for Dakota EHK:936-034-00	1
21	453088600	PG Resin motor 12W	1
22	453089500	Dakota DCI indoor controller EHK: 916-540-00	1
23	4525998	MOTOR COVER	1
24	438082	Thermistor Indoor coilBLACK	1
25	4519813	Thermistor room	1
26	453027000	V	1

13.3 Indoor Unit: Dakota 12 DCI

No.	Part No.	Name	Quan.
1	453036800	Grill A / Dakota 12	1
2	453100500	Grill L axis	1
3	453100600	Grill R axis	1
4	453082900	Filter for Dakota 12	2
7	465720001	Silk-screen front frame for Electra	1
8	4525987	SCREW COVER	3
9	453058201	Evap. System Assy./Dakota 12	1
10	4523526	BERAING ASSY FAN	1
11	4527111	FAN ASSY PLASTIC	1
12	452784401	IOD-12 Air Outlet Assy. (no wire)	1
13	4523693	DRAIN HOSE	1
14	4527186	IOD-12 REAR PANEL ASSY	1
15	453027500	Mount Bracket Assy./Alfa 12	1
16	4527512	Tube Clip	1
17	453130700	Remote Controller RC-7 (Silver)EHK P/N 977-800-40	1
18	4526133	Power cord cable	1
19	4523507	Step motor	1
20	453089600	Display assy. for Dakota EHK:936-034-00	1
21	453088600	PG Resin motor 12W	1
22	453089500	Dakota DCI indoor controller EHK: 916-540-00	1
23	4525998	MOTEOR COVER BLACK	1
24	438082	Thermistor Indoor coil	1
25	4519813	Thermistor room	1
26	453027000	Terminal Cover	1


13.4 Indoor Unit: Dakota 18 DCI

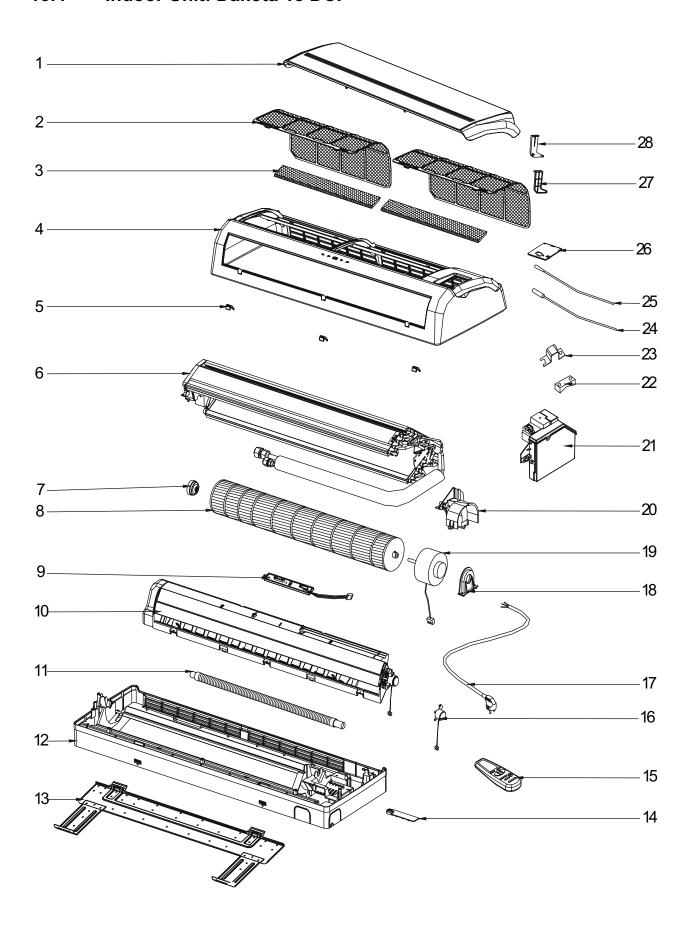

13.5 Indoor Unit: Dakota 18 DCI

No.	Part No.	Name	Quan.
1	465800000	Grill A Assy./Dakota 18	1
2	453080800	Filter	2
3	470500003	Filter Assy.	1
4	465720020	Front Frame Assy./Dakota 18 AIRWELL FOR EU	1
5	453081000	Screw Cover	3
6	462350006	Evaporator Assy.	1
7	4518662	Bearing assy fan	1
8	453082400	Impeller Fan	1
9	467300007	Display Board Assy./Dakota EHK: 936-035-00	1
10	453101600	Air Outlet Frame Assy./ALPHA-17 FOR EU	1
	465800003	Air Outlet Frame Assy./ALPHA-17 FOR AUS	1
11	4518664	Drain hose	1
12	453101400	Unit Housing Assy./ALPHA-17	1
13	453081900	Mount Bracket Assy.	1
14	4526000	TUBE CLIP	1
15	453130700	Remote Controller RC-7 (Silver)EHK P/N 977-800-40	1
	438600	Remote controller RC3-RC 973-600-00 (OPTION)	1
16	4523507	Step motor	1
17	452766401	Power Cord European 2m	1
	452766400	Power Cord ISRAEL	1
18	4518651	Cover Side Motor	1
19	453024500	PG Motor	1
20	452918800	Cover/motor	1
21	467300025	DCI Indoor Controller/Dakota EHK: 916-541-00	1
22	4525988	CABLE LOCKER	1
23	436525	SUPPLY CORD LATCH WMN	1
24	438082	hermistor Indoor coil BLACK	1
25	4519813	Thermistor room	1
26	453027000	Terminal Cover	1
27	465440001	Grill Left Crank	1
28	465440002	Grill Right Crank	1

13.6 Outdoor Unit: GC 7, 9, 12 DCI

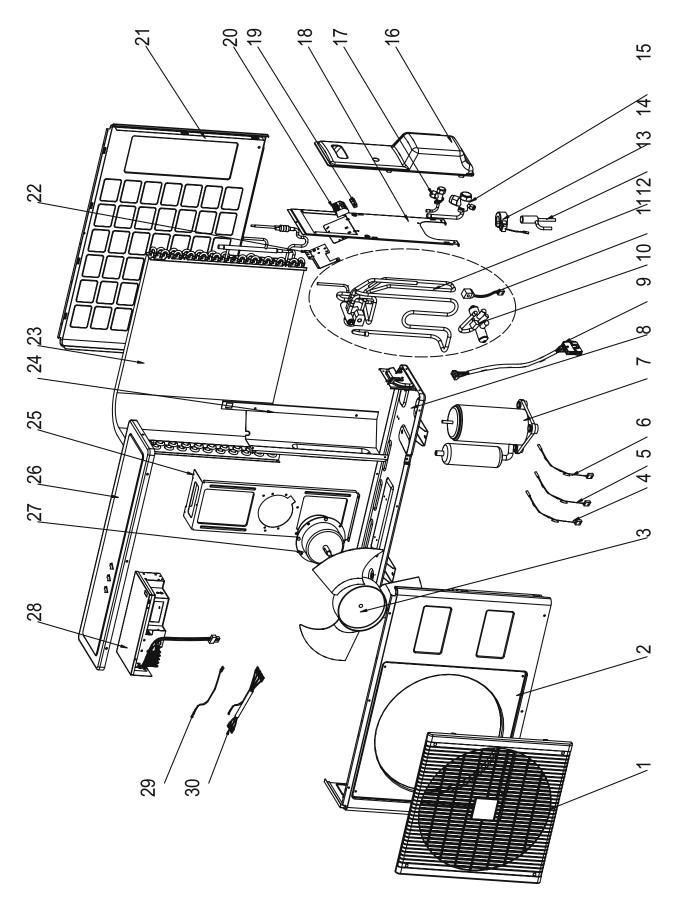

13.7 Outdoor Unit: GC 7 DCI

No.	Part No.	Name	Quan.
1	4522551	Grille A of GCN	1
2	4523441	Front panel A Painting assy	1
3	4519251	Axial Fan OD=400	1
4	453238900	Sensor/OAT	1
5	4526775	Compressor top thermistor(CTT)	1
6	4526776	Outdoor coil thermistor(OCT)	1
7	453170100	Compressor Assy. MATSUSHIBA 5RS092XDJ01	1
8	453052500	PAINTING BASE ASSY.	1
9	4526221	Compressor wire	1
10	4518951	4-W valve SHF-4H for R410A	1
11	4522509	4-Way valve coil	1
12	453058600	4way valve soldering assy FOR GC 7	1
13	453026600	Electronic expansion valve ZDPF(L)-1.5C-01	1
14	4526216	EEV COIL QA(L)12-MD-02	1
15	453047000	Low pressure stop valve for R410A	1
16	4516857	BIG SIDE COVER	1
17	453046900	High pressure stop valve for R410A	1
18	464630000	Side Plate Painting Assy.	1
19	204107	Clip set PVC	1
20	4519188	4 poles terminal block	1
21	4516156	Rear panel Painting assy	1
22	453230000	Connect Plate	1
23	453048000	Condenser assy. (OD7.94x1row) for GC 7	1
24	453052700	PATITION	1
25	323156	Motor support assy	1
26	4516158	Cover panel Painting assy	1
27	453031300	Metal motor 20W	1
28	453031000	DC INVERTER CONTROLLER EHK:906-106-00	1
29	452841100	Earth wire	1
30	453129300	Wire UL1007 16AWG/Controller with 250 connector	1


13.8 Outdoor Unit: GC 9 DCI

No.	Part No.	Name	Quan.
1	4522551	Grille A of GCN	1
2	4523441	Front panel A Painting assy	1
3	4519251	Axial Fan OD=400	1
4	453238900	Sensor/OAT	1
5	4526775	Compressor top thermistor(CTT)	1
6	4526776	Outdoor coil thermistor(OCT)	1
7	453170100	Compressor Assy. MATSUSHIBA 5RS092XDJ01	1
8	453052500	PAINTING BASE ASSY.	1
9	4526221	Compressor wire	1
10	4518951	4-W valve SHF-4H for R410A	1
11	4522509	4-Way valve coil	1
12	453058700	4way valve soldering assy FOR GC 9	1
13	453026600	Electronic expansion valve ZDPF(L)-1.5C-01	1
14	4526216	EEV COIL QA(L)12-MD-02	1
15	453047000	Low pressure stop valve for R410A	1
16	4516857	BIG SIDE COVER	1
17	453046900	High pressure stop valve for R410A	1
18	464630000	Side Plate Painting Assy.	1
19	204107	Clip set PVC	1
20	4519188	4 poles terminal block	1
21	4516156	Rear panel Painting assy	1
22	453230000	Connect Plate	1
23	453048200	Condenser assy. (OD7x2rows) for GC 9	1
24	453052700	PATITION	1
25	323156	Motor support assy	1
26	4516158	Cover panel Painting assy	1
27	453031300	Metal motor 20W	1
28	453031000	DC INVERTER CONTROLLER EHK:906-106-00	1
29	452841100	Earth wire	1
30	453129300	Wire UL1007 16AWG/Controller with 250 connector	1

13.9 Outdoor Unit: GC 12 DCI

No.	Part No.	Name	Quan.
1	4522551	Grille A of GCN	1
2	4523441	Front panel A Painting assy	1
3	4519251	Axial Fan OD=400	1
4	453238900	Sensor/OAT	1
5	4526775	Compressor top thermistor(CTT)	1
6	4526776	Outdoor coil thermistor(OCT)	1
7	4526204	Compressor Assy. MATSUSHIBA 5RS102XAB	1
8	453052500	PAINTING BASE ASSY.	1
9	4526221	Compressor wire	1
10	4518951	4-W valve SHF-4H for R410A	1
11	4522509	4-Way valve coil	1
12	453058800	4way valve soldering assy FOR GC 12	1
13	453026600	Electronic expansion valve ZDPF(L)-1.5C-01	1
14	4526216	EEV COIL QA(L)12-MD-02	1
15	453047000	Low pressure stop valve for R410A	1
16	4516857	BIG SIDE COVER	1
17	453046900	High pressure stop valve for R410A	1
18	464630000	Side Plate Painting Assy.	1
19	204107	Clip set PVC	1
20	4519188	4 poles terminal block	1
21	4516156	Rear panel Painting assy	1
22	453230000	Connect Plate	1
23	453048400	Condenser assy. (OD7.94x2rows) for GC 12	1
24	453052700	PATITION	1
25	323156	Motor support assy	1
26	4516158	Cover panel Painting assy	1
27	453031200	Metal motor 27W	1
28	453031000	DC INVERTER CONTROLLER EHK:906-106-00	1
29	452841100	Earth wire	1
30	453129300	Wire UL1007 16AWG/Controller with 250 connector	1

13.10 Outdoor Unit: GC 18 DCI

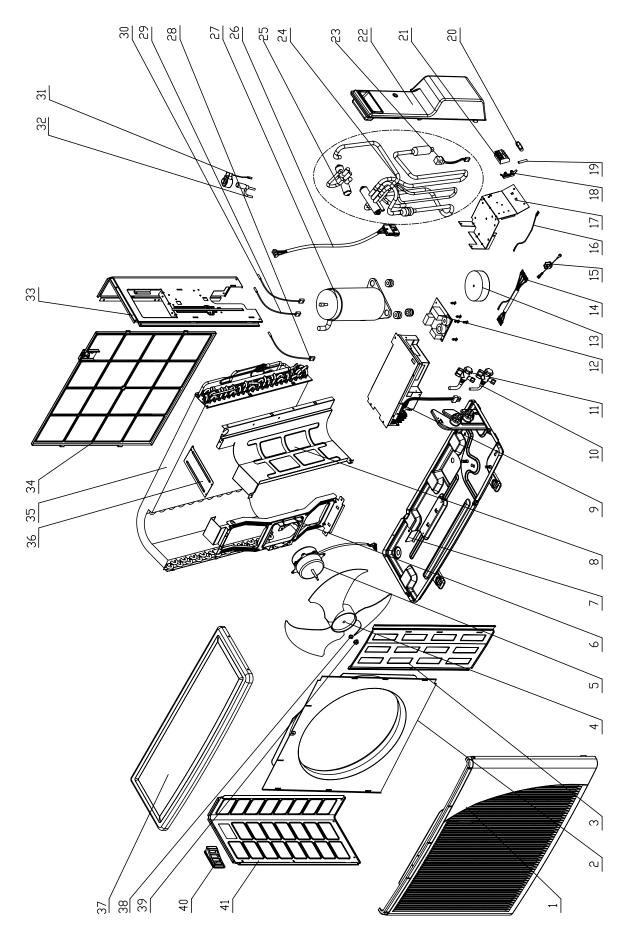

13-10 SM WDIDCI 1-A.2 GB

13.11 Outdoor Unit: GC 18 DCI

No.	Part No.	Name	Quan.
1	433219	Front Panel A1	1
2	4526340	Air inlet ring-420	1
3	433223	Painting Insulation Plate	1
4	4526476	Axial fan OD=401	1
5	452889600R	DC Resin Motor(Nidec)	1
6	433215	Motor Support	1
7	4527363	Base Painting Assy.	1
8	4526299	Partition	1
9	453030500R	Outdoor DCI Controller/2.8kW(English) 90	1
10	4524595	Gas Valve for ONG R410A	1
11	4526301	High pressure stop valve R410a	1
12	467300024R	Filter Board/901A108-00	1
13	4526396	Choke assy. 167-021-01	1
14	4526223	AC-IN wire	1
15	4526968	Earthing wire with magnetic ring	1
16	4526222	Fuse connected wire	1
17	4526300	Therminal sheet	1
18	4526220	Fuse stand JEF-511B(EHK P/N:150-038-00)	1
19	4526533	6C(20A,250VAC)	1
20	204107	Cable clip Nylon	1
21	4519188	4 poles terminal block	1
22	433229	Valve Cover	1
23	4522509	4-Way valve coil	1
24	461600003	4-WayValveAssy	1
25	4518952	4-W valve SHF-7H for R410A	1
26	4526221	Compressor wire	1
27	4523446	Scroll comp assy. 5CS13	1
28	4526775	Compressor top	1
29	4526774	Outdoor air thermistor(OAT)	1
30	4526776	OU coil thermistor (OCT) for DCI	1
31	4526215	Electronic expansion valve ZDPF(L)-	1
32	4526216	EEV COIL QA(L)12-HR-01A-RK	1
33	4519606	Right side panel (painting plate)	1
34	433228	Back Side Net	1
35	470660008	CondenserList/GC50R410A	1
36	4526298	Bridge	1
37	4519614	Painting Top Cover	1
38	4526480	Gasket for axial fan	1
39	4519300	Nut M5 L	1
40	433225	Handle	1
41	4519607	Left Side Panel Painting Plate	1

SM WDIDCI 1-A.2 GB 13-11

APPENDIX A

INSTALLATION AND OPERATION MANUAL

- ► OPERATING MANUAL DAKOTA 7/9/12/18 DCI
- ► INSTALLATION MANUAL DAKOTA 7/9/12/18 DCI